

EH Troubleshooting

1 Digital display output





2 Description

• EH indicates system self-check in the factory, it will not display in the normal operating.