


FP Troubleshooting

1 Digital display output

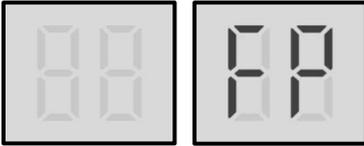

2 Description

- FP indicates pump in a combination system dial to different status. When the FP displayed, a manual system restart is required before the system can resume operation.
- All units stop running.
- Error code is only displayed on main PCB and user interface.

3 Possible causes

- The S12_2 of slave units is different with the master unit.
- Main PCB damaged.

4 Procedure

