



# Washing Machine

## OWNER'S MANUAL

**MFG10W80B/W-ES**

Read This Manual 

Read all instructions and explanations for the installation before use. Follow the instructions carefully. Keep the operation instructions handy for later use. If the appliance is sold or passed on, ensure that the new owner always receives this operation instructions.

## SAFETY INSTRUCTIONS

- Safety Instructions ..... 2

## INSTALLATION

- Product Description ..... 9
- Installation ..... 10

## OPERATION

- Quick Start ..... 13
- Before Each Washing ..... 15
- Detergent Dispenser ..... 16
- Control Panel ..... 18
- Programmes.....19
- Option..... 23

## MAINTENANCES

- Cleaning and Care ..... 26
- Trouble Shooting ..... 29
- Technical Specifications ..... 30
- Product Fiche ..... 31
- Built-in installation ..... 33

# SAFETY INSTRUCTIONS

---

## ■ Safety Instructions

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

### Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

### Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

### Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

### Warning!

#### ELECTRIC SHOCK HAZARD

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  - If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- Risk of electric shock!

# SAFETY INSTRUCTIONS

---

- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised that they do not play with the appliance.
- Children 3 years and under shall be kept away from the appliance or continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

## INSTALLATION LOCATION AND SURROUNDING

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpet floor. The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washing machine.

# SAFETY INSTRUCTIONS

---

- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see „Maintenance - Cleaning of drain pump filter“) to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

## INSTALLATION

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the washing machine, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 MPa.

## ELECTRICAL CONNECTION

- Make sure the supply cable is not trapped by the machine, it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the “ Technical specifications “ table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.

# SAFETY INSTRUCTIONS

---

•Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

## Warning!

- Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.

## WATER CONNECTIONS

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak close the water tap and get it repaired. Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
- The water inlet and outlet hoses have to be safely installed and remain undamaged. Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

# SAFETY INSTRUCTIONS

---

## OPERATION AND MAINTENANCE

- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
- Remove all objects from pockets such as lighters and matches before use the appliance.
- Thoroughly rinse items that have been washed by hand.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed in hot with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine
- Fabric softeners or similar products should be used as recommended in their instructions.
- Never try to open the door forcefully. The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.

# SAFETY INSTRUCTIONS

---

- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purpose. Risk of electric shock!
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The producer will not be responsible for damages caused by the intervention of not authorized persons.

## TRANSPORT

- Before Transport:
  - Bolts shall be reinstalled to the machine by a specialized person
  - Accumulated water shall be drained out of the machine
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

## INTENDED USE

The product is intended only for home use and for textiles in household amounts suitable for machine washing and drying. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injuries that may result of it.

- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments;
  - Areas for communal use in blocks of flats or in launderettes.



# SAFETY INSTRUCTIONS

---


## Packaging/Old appliance



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

# INSTALLATION


## ■ Product Description

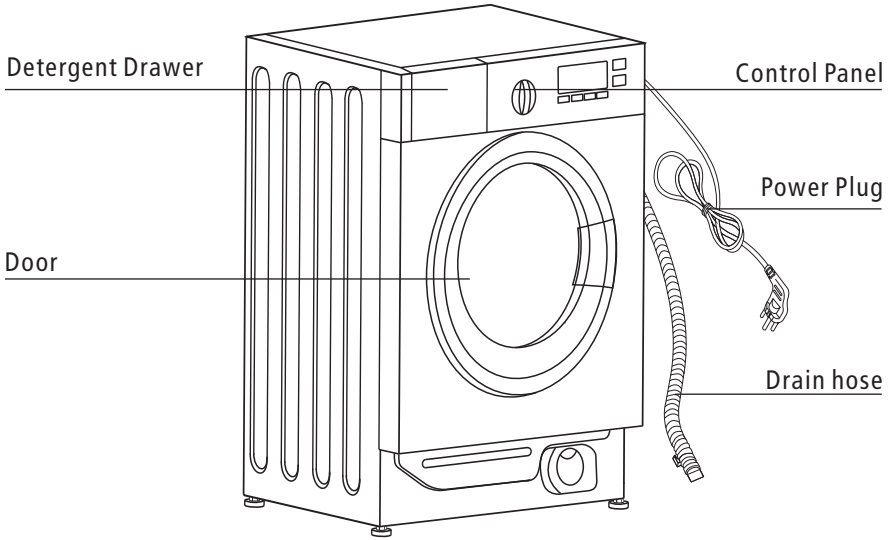

### Note!

- The product line chart is for reference only, please refer to real product as standard.

## Accessories

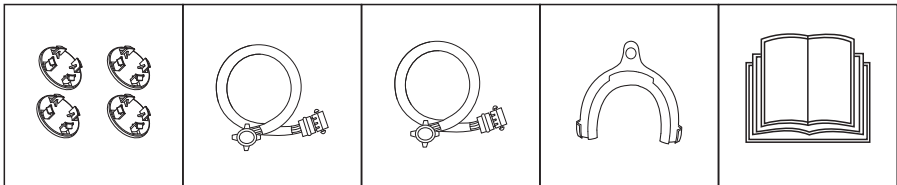

Transport hole plug

Supply hose cold water

Supply hose hot water (optional)

Drain hose support (optional)

Owner's manual


# INSTALLATION

## ■ Installation

### Installation area


#### ⚠ Warning!

- Stability is important to prevent the product from wandering! Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture

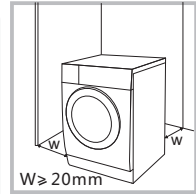

Before installing the machine, the location characterized as follows shall be selected:


1. Rigid, dry, and level surface
2. Avoid direct sunlight
3. Sufficient ventilation
4. Room temperature is above 0°C
5. Keep far away from the heat sources such as coal or gas burning appliances.

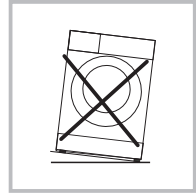

### Unpacking the washing machine

#### ⚠ Warning!

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.

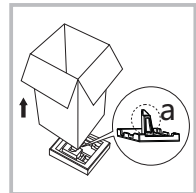

1. Remove the cardboard box and styrofoam packing.
2. Lift the washing machine and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

# INSTALLATION


## Remove transport bolts

### ⚠ Warning!


- You must remove the transport bolts from the backside before using the product.



Loosen the 4 transport bolts with a spanner.

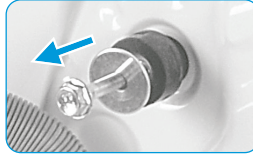

Remove the bolts including the rubber parts and keep them for future use.

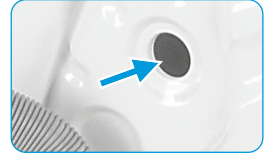


Close the holes using the cover caps.

## Levelling the washing machine

### ⚠ Warning!

- The lock nuts on all four feet must be screwed tightly against the housing.

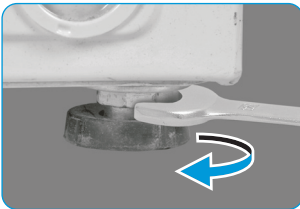

1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level and steady.

## Connect the water supply hose

### ⚠ Warning!

To prevent leakage or water damage, follow the instructions in this chapter

- Do not kink, crush or modify water inlet hose.



Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.



### 🔧 Note!

- Connect manually, do not use tools. Check if the connections are tight.

# INSTALLATION

## Drain Hose



### ⚠ Warning!

- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result of water leakage.

There are two ways to place the end of drain hose:

1.Put it into the water trough.

2.Connect it to the branch drain pipe of the trough.

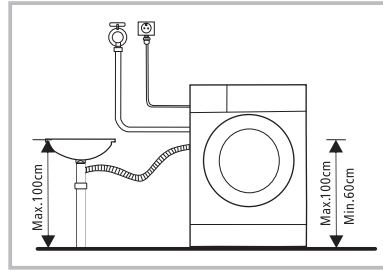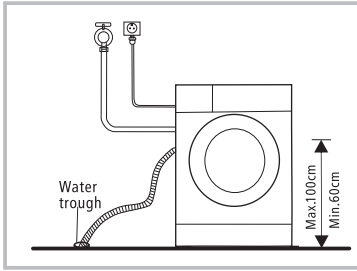

# OPERATION

---

## ■ Quick Start

### ⚠ Caution!

- Before washing, please make sure the washing machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, start the Cotton program at 90°C without laundry and detergent.

### 📌 Calibration


It's recommended to calibrate the washing machine, so that provide the best performance.

The appliance is able to detect the amount of laundry loaded. This function is optimizing the product performance by minimizing energy and water consumption, saving you money and time. For this reason it's recommended to calibrate the appliance for best use.

- 1- Remove all accessories from the drum and close the door;
- 2- Insert the mains plug to the socket;
- 3- Switch on the washing machine and press "Speed" and "Delay" simultaneously for 10 seconds until "t19" is displayed;
- 4- Press [▶||] to start the appliance and wait till "\*\*\*\*\*" is displayed.
- 5- The machine MFG60-S1210/C20E-EU(NE) does not needcalibrate , so step 1 to step 4 can be skipped.

# OPERATION


## 1. Before Washing

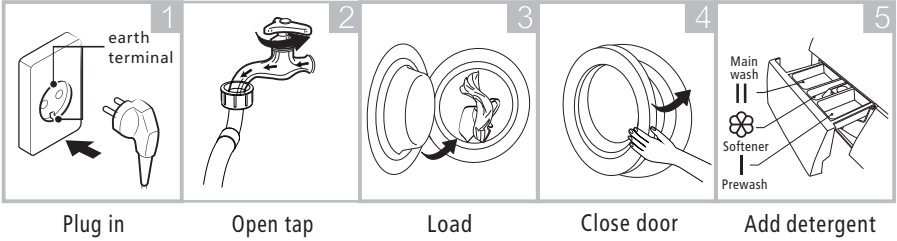

### Note!

- Detergent need to be added in compartment I if the pre-wash function is selected.

## 2. Washing

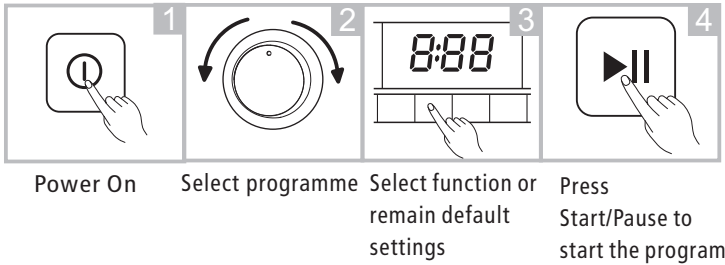


## 3. After Washing

Buzzer beep and "End" on display.


# OPERATION

## ■ Before Each Washing


- The ambient temperature of the washing machine should be 5-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine washing properly.

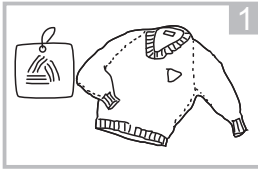


Check the care label

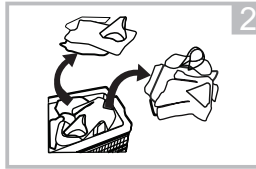


Sort laundry according to color and textile type

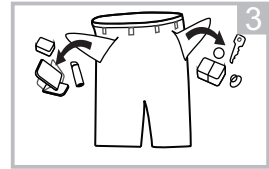


Take all items out of the pockets

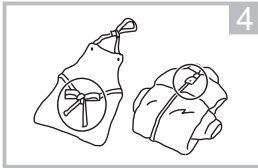

Tie together long textile strips and belts, close zips and button

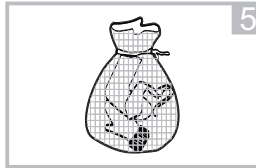

Put small items into a laundry bag

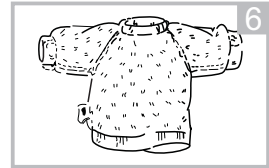

Turn easy-pilling and long-pile fabric inside out

### ⚠ Warning!


- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothes items may easily create big eccentricity and cause alarm due to unbalance. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.



# OPERATION

## ■ Detergent Dispenser

- I Pre wash
- II Main wash
- ☼ Softener
- ⊖ Release button to pull out the dispenser

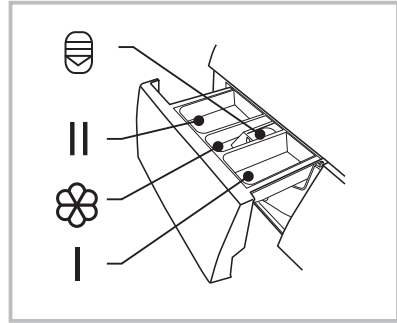

### ⚠ Caution!

- Detergent only need to be added in "compartment I "after selecting pre-wash function.

Programme	I	II	☼	Programme	I	II	☼
Quick 15		●	○	Baby Care	○	●	○
Rapid 45	○	●	○	Wool		●	○
20°C		●	○	Delicate		●	○
Jeans	○	●	○	Mixed	○	●	○
Eco 40-60		●	○	Synthetic	○	●	○
Intensive		●	○	Sports	○	●	○
Rinse&Spin			○	Cotton	○	●	○
Spin Only							

● Means must      ○ Means optional

# OPERATION

## Detergent Recommendation

Recommended washing detergent	Wash cycles	Washing temp.	Type of laundry and textile
Heavy-duty detergent with bleaching agents and optical brighteners	Cotton, ECO 40-60, Intensive	40/60	White laundry made from boil-proof cotton or linen
Colour detergent without bleaching agent and optical brighteners	Intensive, Cotton, ECO 40-60, Mixed, 20°C	20/30/40/60	Coloured laundry made from cotton or linen
Color or mild detergent without optical brighteners	20°C, Synthetic	Cold/20/30/40	Coloured laundry made from easy care fibres or synthetic materials
Mild washing detergent	Synthetic	20/30	Delicate textiles, silk, viscose
Special wool detergent	Wool	20/30/40	Wool

### Note!

- Agglomerating or ropy detergent or additive can be diluted in some water before pouring it into the detergent dispenser, to avoid its inlet to get blocked and thus cause a water overflow.
- Please choose the suitable type of detergent to get a maximum of washing performance and a minimum of water and energy consumption
- To achieve the best cleaning result a proper detergent dosing is important.
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your laundry is, less dirty clothes require less detergent.
- Highly concentrated (compact detergent) requires particularly accurate dosing.

Following symptoms are a sign of detergent overdosing:


- heavy foam formation
- poor washing and rinsing result

Following symptoms are a sign of detergent underdosing:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

# OPERATION

## Control Panel

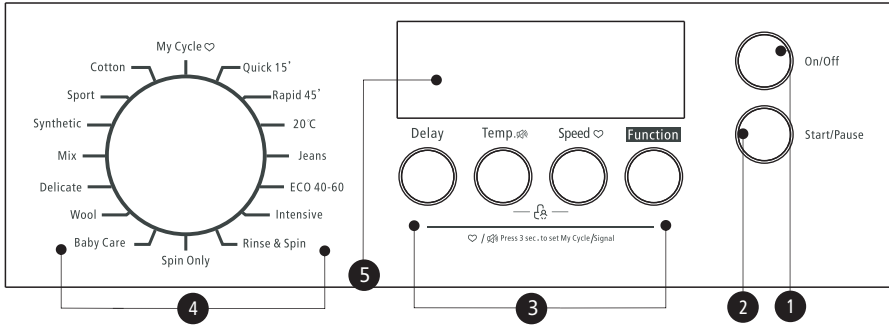

### Note!

- The chart is for reference only, Please refer to real product as standard.

#### 1 Power

Product is on/off.

#### 2 Start/Pause

Press the button to start or pause the washing cycle.

#### 3 Option


This allows you to select an additional function and will light when selected.

#### 4 Programmes

Available according to the laundry type.

#### 5 Display

The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.

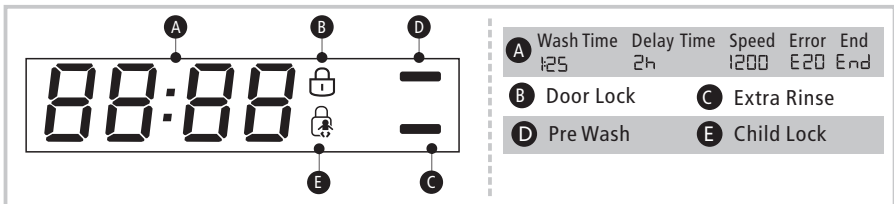

# OPERATION

## ■ Programmes

Programme	Washing/Drying Load (kg)	Display Time(H)
	8.0	8.0
		1400
Quick 15	2.0	0:15
Rapid 45	2.0	0:45
20°C	4.0	1:01
Jeans	8.0	1:45
Eco 40-60	8.0	3:35
Intensive	8.0	3:48
Rinse&Spin	8.0	0:20
Spin Only	8.0	0:12
Baby Care	8.0	1:43
Wool	2.0	1:07
Delicate	2.5	0:50
Mixed	8.0	1:20
Synthetic	4.0	3:18
Sports	4.0	1:11
Cotton	8.0	3:49



### Note!

- The parameters in this table are only for user's reference. The actual parameters maybe different with the parameters in above mentioned table.

# OPERATION

## ■ Programmes

Cycle	Nominal capacity in kg	Temperature setting	Cycle duration in hours and minutes	Energy consumption in kWh/operalling cycle	Water consumption in liter//operalling cycle	Highest temperature ature °C <sup>1)</sup>	residual moitsure in % /spin speed <sup>2)</sup>
Quick 15	2.0	Cold	0:15	0.030	31.0	Cold	75%/800
20°C	4.0	20	1:01	0.183	44.0	20	65%/1000
Intensive	8.0	40	3:48	1.013	71.0	40	70%/800
Mixed	8.0	40	1:20	0.754	71.0	40	70%/800
Cotton	8.0	60	3:54	1.515	71.0	60	53%/1400
ECO 40-60 <sup>3)</sup>	8.0	-	3:38	0.852	61.0	37	53%/1400
	4.0	-	2:48	0.542	45.0	33	53%/1400
	2.0	-	2:48	0.216	36.0	23	53%/1400

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the ECO 40-60 programme are indicative only.
- Concerning to EN 60456:2016 With (EU)No.1061/2010,  
The EU energy efficiency class is: A+++  
Energy test program: Intensive;Speed:The highest speed; Temp.: 60°C/40°C;  
Other as the default.Half load for 8.0Kg machine:4.0Kg.
- Concerning to EN 60456:2016/prA2019 With (EU)2019/2014, (EU)2019/2023,  
The EU energy efficiency class is: B  
Energy test program: ECO 40-60. Other as the default.Other as the default.  
Half load for 8.0Kg machine:4.0Kg.  
Quarter load for 8.0Kg machine:2.0Kg.

# OPERATION

---

- 1) The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.
- 2) Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.
- 3) The ECO 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This programme is used to assess the compliance with the regulation (EU) 2019/2023.

The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

Loading the household washing machine up to the capacity indicated for the respective programmes will contribute to energy and water savings.

Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

## Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme. The machine will continue the programme when the power supply is re-established.

# OPERATION

---

## ■ Programmes

Programmes are available according to the laundry type.

Programmes	
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Rapid 45'	Washing few and not very dirty clothes quickly.
Synthetic	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
Baby Care	Washing the baby's clothes, it can make the baby's wear cleaner. and make the rinse performance better to protect the baby skin.
Jeans	Specially for jeans.
Mixed	Mixed load consisting of textiles made of cotton and synthetics.
20°C	Washing brightly colored clothes, it can protect the colors better .
Sports	Washing the activewear.
Quick 15'	Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.
Delicate	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.
Wool	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
Spin Only	Extra spin with selectable spin speed.
Rinse&Spin	Extra rinse with spin.
Eco 40-60	Washing brightly colored clothes, it can protect the colors better. Default 40°C, not selectable, suitable for laundry washing at about 40°C-60°C.
Intensive	To increase the washing effects, washing time is increased.

---

# OPERATION

## ■ Option

Cycle	Default Temp.(°C)	Default spin speed in rpm		Additional functions
Wash cycles		1200	1400	
Quick 15	Cold	800	800	Delay,
Rapid 45	40	800	800	Delay, Pre Wash, Extra Rinse,
20°C	20	1000	1000	Delay, Extra Rinse,
Jeans	60	1000	1000	Delay, Pre Wash, Extra Rinse,
Eco 40-60	--	1200	1400	Delay,
Intensive	40	800	800	Delay,
Rinse&Spin	--	1000	1000	Delay, Extra Rinse,
Spin Only	--	1000	1000	Delay,
Baby Care	60	800	800	Delay, Pre Wash, Extra Rinse,
Wool	40	600	600	Delay, Extra Rinse,
Delicate	30	600	600	Delay, Extra Rinse,
Mixed	40	800	800	Delay, Pre Wash, Extra Rinse,
Synthetic	40	800	1200	Delay, Pre Wash, Extra Rinse,
Sports	40	800	800	Delay, Pre Wash, Extra Rinse,
Cotton	40	800	1400	Delay, Pre Wash, Extra Rinse,

### Note!

- For the maximum spin speed, program time, and other details of the ECO 40-60 program, please refer to the content on the Product Fiche page.
- The table shows which cycle offers which options for adjustment. If an adjustment is not possible for a cycle.



# OPERATION

---

Delay

## Delay

Set the Delay function:

1. Select a programme
2. Press the Delay button to choose the time (the delaying time is 0-24 H.)
3. Press [Start/Pause] to commence the delay operation



On/Off



Choose the Programme



Setting time



Start

Cancel the Delay function:

Press the [Delay] button until the display be 0H. It should be pressed before starting the programme. If the programme already started, should press the [On/Off] button to reset the programme.

## ! Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, press the [On/Off] button the program will continues.

Pre Wash

## Pre Wash

The Prewash function can get an extra wash before main wash.

Extra Rinse

## Extra Rinse

The laundry will undergo extra rinse once after you select it.

Speed

## Speed

Press the button to change the spin speed.

Temp.


## Temp.

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps: Cold - 20°C - 30°C - 40°C - 60°C - 90°C.



## My Cycle

Memory the frequently used programmes

Press [  ] 3sec. to memory the running programme. The default is cotton.

# OPERATION

---



## Child Lock

To avoid mis operation by children.



On/Off



Start/Pause



Press [Temp.] and [Speed]  
3 sec. till buzzer beep.



## ⚠ Caution!

- Press the two button 3sec. also to be released the function.
- The "Child Lock" will lock all buttons except [On/Off].
- Cut off the power supply , the kid's protection is to be released.
- The child lock will remain effective when the power is resumed for some models.



## Mute the buzzer



On/Off



Start/Pause



Press the [Temp.]button for 3sec.the buzzer  
is mute.

To act the buzzer function, press the button again for 3 seconds. The setting  
will be kept until the next reset.

## ⚠ Caution!

- After Muting the buzzer function, the sounds will not be activated any more.

# MAINTENANCE

---


## ■ Cleaning and Care

### ⚠ Warning!

- Always unplug the appliance and close the water tap before cleaning and maintenance.

### Cleaning the Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a cloth to wipe it off immediately. Never use sharp items to clean the appliance.

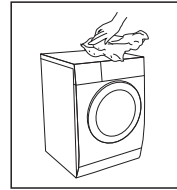

### ⚠ Caution!

- Never use abrasive or caustic agents, formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

### Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

### 📌 Note!


- Keep any laundry away from the machine while cleaning the drum.

### Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages.

Remove any coins, buttons and other objects from the seal after each wash.

Clean the Door Seal and Glass every month to ensure the normal operation of the appliance.

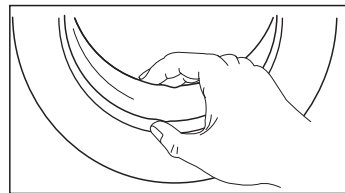





# MAINTENANCE

## Cleaning the Inlet Filter

### Note!


- Diminishing water flow is a sign that the filter need to be cleaned.

1. Close the tap and remove the water supply hose from it.
2. Clean the filter with a brush.
3. Unscrew the water supply hose from the backside of the machine. Pull out the filter with long nose pliers.
4. Use a brush to clean the filter.
5. Reinstall the filter to the water inlet and reconnect the water supply hose.
6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

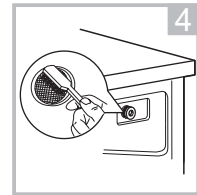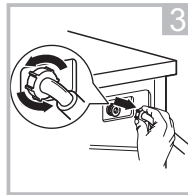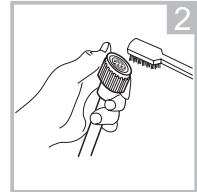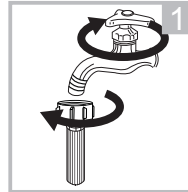


## Clean The Detergent Dispenser


1. Press down the arrow location on softener cover inside the dispenser drawer.
2. Lift the clip up and take out softener cover and wash all grooves with water.
3. Restore the softener cover and push the drawer into position.

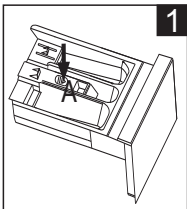


Pull out the dispenser drawer with press the A

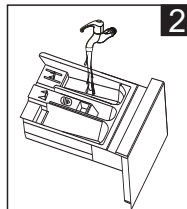

Clean the dispenser drawer under water

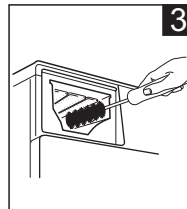

Clean inside the recess with an old toothbrush

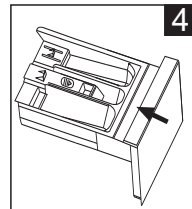

Insert the dispenser drawer

### Note!


- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.

# MAINTENANCE


## Cleaning the Drain Pump Filter

### ⚠ Warning!


- Be careful of the hot water!
- Allow detergent solution to cool down.
- Unplug the machine to avoid electrical shock before washing.
- Drain pump filter can filter the yarns and small foreign matters from the washing.
- Clean the filter periodically to ensure the normal operation of washing machine.
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

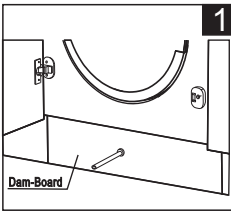

After the power is disconnected, pull out the Dam-Board.

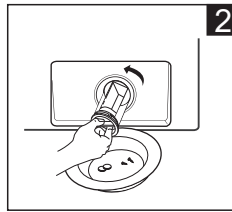

Turn the filter down as shown with the figure and take out sundries matters.

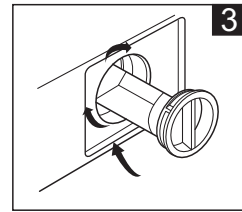

Reinstall each part back after sundries matters are removed.

### ⚠ Caution!

- Make sure emergency drain hose cap and the emergency drain hose are reinstalled properly, otherwise water may leak.

# MAINTENANCE

---

## ■ Trouble Shooting

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts still in place. Floor is not solid or level.	Check if the fixing bolts have been removed Make sure the appliance is installed on a solid and level floor.

## Error Codes

Description	Possible cause	Solution
<b>E30</b>	Door is not closed properly	Close the door properly and restart.
<b>E10</b>	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
<b>E21</b>	Overtime water draining	Check the drain hose for blockage.
<b>E12</b>	Water overflow	Restart the appliance.
<b>EXX</b>	Others	Restart the appliance. If problem persists, please contact the customer service.

---

# MAINTENANCE

## Customer service

Spare part for your appliance are available for a minimum of 10 years.

In case of questions please contact our customer service at:

### Warning!

Risk of electric shock

- Never try repair an appliance which is defective or presumed to be defective. You may put your own and future users' lives in danger. Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recognized!

## Transport

### IMPORTANT STEPS WHEN MOVING THE APPLIANCE


- Unplug the appliance and close the water inlet tap.
- Check, if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Maintenance Cleaning the drain pump filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

## Technical Specifications

Power Supply 220-240V~,50Hz

MAX.Current 10A

Standard Water Pressure 0.05MPa~1MPa

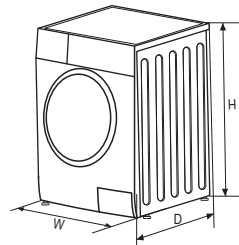

Model	Washing Capacity	Dimension (W*D*Hmm)	Net Weight	Rated Power
MFG10W80B/W-ES	8.0kg	595*540*825	63kg	1950W

# MAINTENANCE

## Product Information Sheet acc. regulation (EU) 2019/2023

**Supplier's name or trade mark:** Midea Europe GmbH

**Supplier's address<sup>(b)</sup>:**

**Model identifier:** MFG10W80B/W-ES

**General product parameters:**

Parameter	Value	Parameter	Value	
Rated capacity <sup>(a)</sup> (kg)	8.0	Dimensions in cm	Height	83
			Width	60
			Depth	54
EEI <sub>w</sub> <sup>(a)</sup>	60.0	Energy efficiency class <sup>(a)</sup>	B	
Washing efficiency index <sup>(a)</sup>	1.031	Rinsing effectiveness (g/kg) <sup>(a)</sup>	5.0	
Energy consumption in kWh per cycle, based on the eco 40-60 programme. Actual energy consumption will depend on how the appliance is used.	0.545	Water consumption in litre per cycle, based on the eco 40-60 programme. Actual water consumption will depend on how the appliance is used and on the hardness of the water.	48	
Maximum temperature inside the treated textile <sup>(a)</sup> (°C)	Rated capacity	37	Weighted remaining moisture content <sup>(b)</sup> (%)	53.9
	Half	33		
	Quarter	23		
Spin speed <sup>(a)</sup> (rpm)	Rated capacity	1400	Spin-drying efficiency class <sup>(a)</sup>	B
	Half	1400		
	Quarter	1400		
Programme duration <sup>(a)</sup> (h:min)	Rated capacity	3 : 38	Type	built-in
	Half	2 : 48		
	Quarter	2 : 48		
Airborne acoustical noise emissions in the spinning phase <sup>(a)</sup> (dB(A) re 1 pW)	76	Airborne acoustical noise emission class <sup>(a)</sup> (spinning phase)	B	
Off-mode (W)	0.50	Standby mode (W)	1.00	
Delay start (W) (if applicable)	4.00	Networked standby (W) (if applicable)	N/A	

**Minimum duration of the guarantee offered by the supplier<sup>(b)</sup>:**

This product has been designed to release silver ions during the washing cycle	NO
--	----

**Additional information:**

Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2019/2023 (1) (b) is found:

<sup>(a)</sup> for the eco 40-60 programme.

<sup>(b)</sup> changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.

<sup>(c)</sup> if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.



# MAINTENANCE

---

- 1) The actual energy consumption will depend on how the appliance is used.
- 2) The actual water consumption will depend on how the appliance is used and on the hardness of the water.
- 3) Delivery of the spare parts within 15 working days after having received the order.

## Product Data Sheet concerning (EU) 2019/2014

The product data sheet for your appliance can be found online.

Go to <https://eprel.ec.europa.eu> and enter the model identifier for your appliance to download the data sheet.

The model identifier for your appliance can be found in the technical specifications section.

# MAINTENANCE

## ■ Built-in installation

### Appendix

 
Self-tapping screws (ST4\*12)



Self-tapping screws (M5\*12)




Hinges



Counter magnet



 Spacer



Fixed position paper



### Tool

Screw driver



 
Automatic driver




Ruler




Pencil




### Install Steps

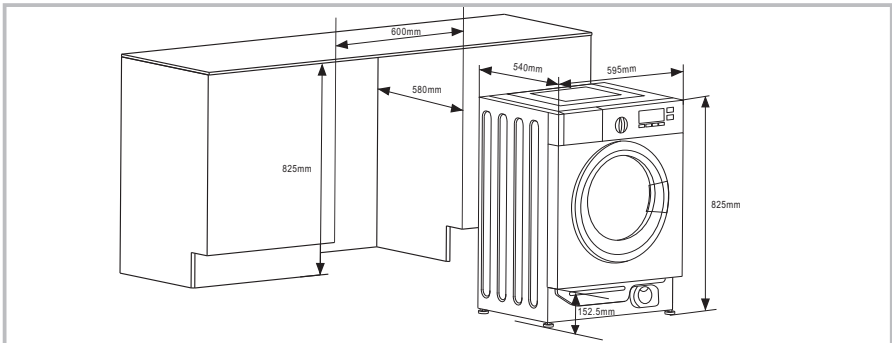

### Overview

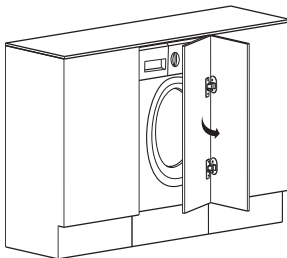


The door is open from left to right

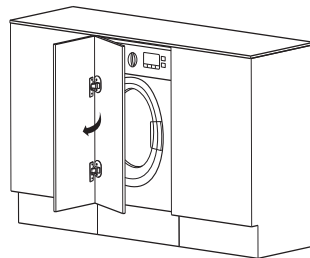


The door is open from right to left

### Preparation and assembly of the door


# MAINTENANCE

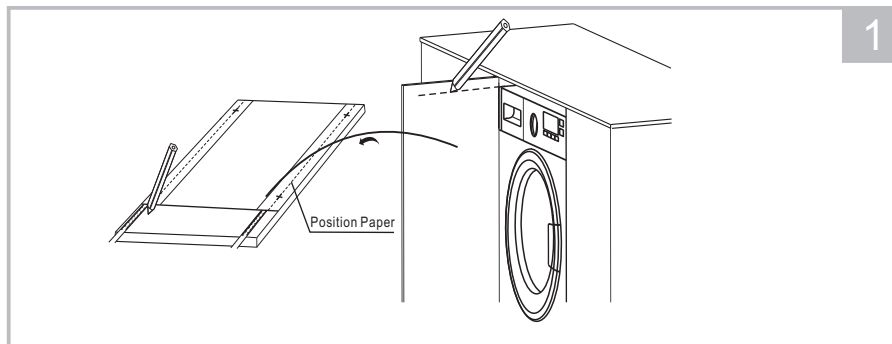

Make the mark on the door

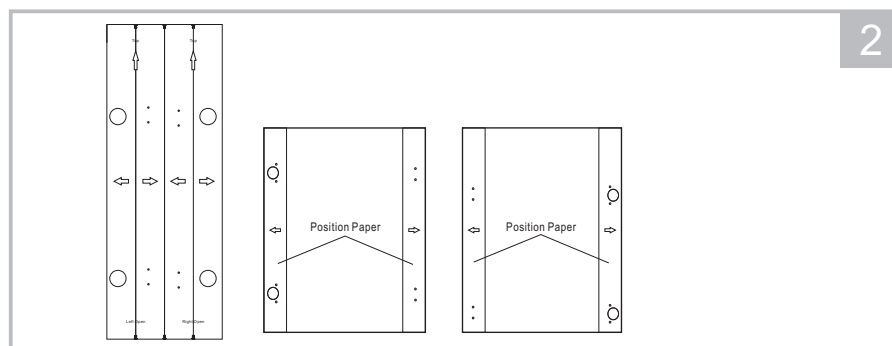


Fixed position paper on the door.

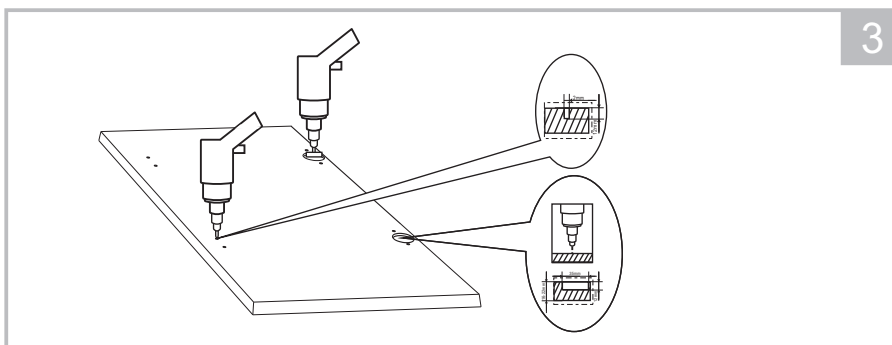


Drill hole on the door


# MAINTENANCE

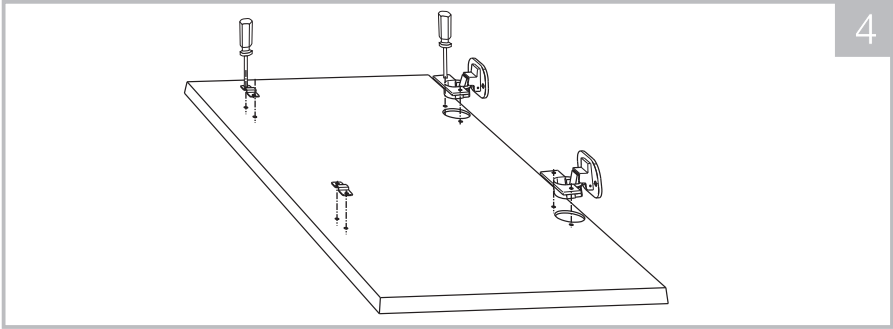

Installation the hinges and spacer

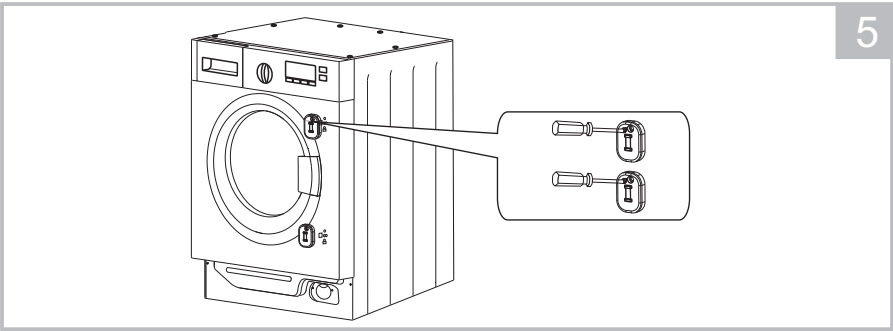

Installation the counter magnet

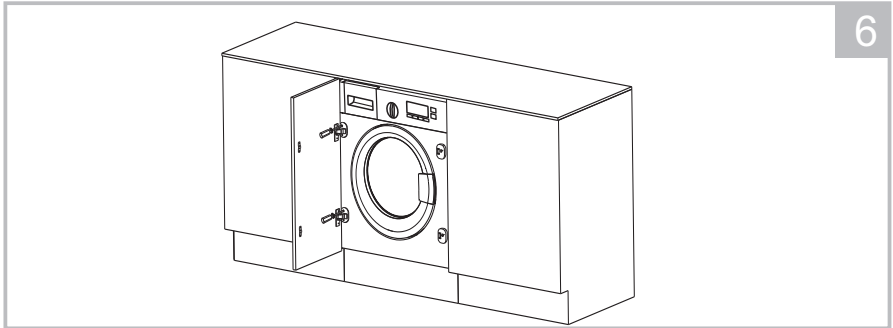

Installation the door

## Warning!

- When installing the appliance into the kitchen ensure furniture, if possible, the hoses are placed in either of the two recesses on the back of the appliance. This will help to prevent the hoses from becoming kinked or trapped.

# CONTENIDO

---

## INSTRUCCIONES DE SEGURIDAD

- Instrucciones de seguridad..... 2

## INSTALACIÓN

- Descripción del producto..... 8
- Instalación..... 9

## FUNCIONAMIENTO

- Inicio rápido ..... 12
- Antes de cada lavado ..... 13
- Dispensador del detergente..... 14
- Panel de control..... 15
- Opciones..... 16
- Programas..... 19
- Tabla de programa de lavados..... 20

## MANTENIMIENTO

- Limpieza y cuidados ..... 21
- Resolución de problemas..... 24
- Especificaciones técnicas ..... 25
- Ficha del producto..... 26
- Instalación integrable..... 27

# INSTRUCCIONES DE SEGURIDAD

---

## ■ Instrucciones de seguridad

Debe seguir todas las instrucciones de este manual para minimizar el riesgo de incendio, descarga eléctrica, daños a bienes, lesiones o muerte. Los riesgos se clasifican según los siguientes símbolos:

### Advertencia

Esta combinación indica una situación de riesgo potencial que, de no evitarse, puede resultar en la muerte o en lesiones graves.

### Atención

Esta combinación indica una situación de riesgo potencial que, de no evitarse, puede resultar en lesiones leves y daño a objetos y al entorno.

### Nota

Esta combinación indica una situación de riesgo potencial que podría resultar en lesiones leves.

### Advertencia

#### Descargas eléctricas

- Si el cable de alimentación está dañado, debe sustituirlo el fabricante, el servicio técnico oficial u otras personas igualmente cualificadas.
- Debe emplear las tuberías proporcionados con el aparato, no reutilice tuberías antiguas.
- Antes de realizar mantenimiento, desenchufe el aparato de la corriente.

- 
- Desenchufe de la corriente y del suministro de agua después del uso. Las presiones de entrada de agua máxima y mínima se miden en pascales.
  - Para su seguridad, la alimentación debe conectarse en un enchufe de tres polos con tierra. Compruebe que el enchufe tiene una toma de tierra apropiada.
  - Todo dispositivo eléctrico o de agua debe conectarlo un técnico autorizado, siguiendo las instrucciones del fabricante y la normativa local.
  - Desenchufe el aparato antes de la limpieza o mantenimiento.
  - No utilice enchufes con una corriente nominal inferior a la del aparato. Nunca desenchufe el aparato con las manos mojadas.
  - Recuerde desconectar la corriente y el suministro de agua tras lavar la ropa.

## **Seguridad para los niños**

- Pueden usar el aparato niños a partir de 8 años y personas con capacidades físicas, mentales o sensoriales reducidas, o que no tengan experiencia y conocimientos, si se les proporciona supervisión e instrucciones sobre el uso seguro del aparato y si entienden los riesgos que conlleva. Los niños no deben jugar con el aparato, ni encargarse de su limpieza y mantenimiento básico sin supervisión.
- Debe supervisar en todo momento a los niños de menos de 3 años para que no jueguen con la máquina.
- Es posible que niños o mascotas se metan dentro de la máquina. Compruébelo antes de ponerla en marcha.
- Vigile que los niños no jueguen con el aparato.

## INSTRUCCIONES DE SEGURIDAD

- La puerta de cristal puede calentarse mucho durante el funcionamiento. Mantenga a niños y mascotas lejos de la máquina durante el funcionamiento en salas muy húmedas o que contengan gases explosivos o cáusticos.
- Retire todo el embalaje y tornillos de transporte antes del uso o podrían causar serios daños al aparato.

### Riesgo de explosión

- No lave artículos que se hayan lavado, empapado o humedecido con sustancias combustibles o explosivos (como cera, aceite, pintura, gasolina, desengrasante, disolvente, queroseno, etc.) Puede causar un incendio o explosión.
- No use la lavadora si se han usado químicos industriales para limpiarla.
- No conecte el escape a ningún tubo que expulse gases de aparatos que quemen gas u otros combustibles.
- Aclare abundantemente las prendas lavadas a mano.

### ⚠ Atención

### Instalación del producto

- Este aparato es sólo para uso en interior.
- Las aberturas no deben quedar obstruidas por alfombras.
- El aparato no debe instalarse en baños o habitaciones muy húmedas, ni que contengan gases explosivos o cáusticos.
- Los modelos con una sola válvula de entrada sólo pueden conectarse al suministro de agua fría. Los de válvula de entrada doble deben conectarse correctamente al suministro de agua fría y caliente.



## INSTRUCCIONES DE SEGURIDAD

---

- El enchufe debe quedar accesible tras la instalación.
- El aparato no debe instalarse tras puertas con cerradura, puertas correderas ni con bisagras en el lado contrario a la de la lavadora.
- No instale el aparato en sitios húmedos.
- Retire todo el embalaje y tornillos de transporte antes del uso o podrían causar serios daños.

### Riesgo de daño del aparato

Este aparato es sólo para uso doméstico, y está pensado para tejidos adecuados para lavado a máquina.

No se suba ni se sienta sobre el aparato.

No se apoye contra la puerta.

Precauciones para el transporte del aparato:

1. Los tornillos de transporte debe recolocarlos una persona especializada.
2. Debe drenarse toda agua acumulada.
3. Mueva la máquina con cuidado. No la levante sujetando ningún saliente. No debe usar la puerta como asa durante el transporte.
4. La máquina es pesada, transpórtela con cuidado.
5. No meta las manos en el tubo de extracción de agua.

No cierre la puerta con excesiva fuerza. Si tiene dificultades para cerrarla, compruebe que no la esté bloqueando alguna prenda y que la ropa está bien distribuida.

No debe lavar alfombras en esta máquina.

# INSTRUCCIONES DE SEGURIDAD

---

## Funcionamiento del aparato

- **Debe calibrar la lavadora antes de su uso.**
- Antes del primer lavado, el producto debe ponerse en marcha en todos los programas sin ropa dentro.
- No utilice disolventes inflamables, explosivos o tóxicos, como gasolina o alcohol, etc. a modo de detergentes. Utilice sólo detergentes adecuados para el lavado a máquina, especialmente para el tambor.
- Compruebe que todos los bolsillos están vacíos: los objetos rígidos o afilados como monedas, broches, clavos o piedras pueden causar serios daños al aparato.
- Compruebe si se ha drenado el agua del tambor antes de abrir la puerta. No lo haga si aún quedan restos de agua.
- Tenga cuidado de no quemarse cuando la lavadora drene el agua de lavado caliente.
- Tras completarse el programa, espere 2 minutos antes de abrir la puerta (algunos modelos).
- Nunca rellene de agua a mano durante el lavado.
- Si es imprescindible secar a máquina tejidos que contengan aceite vegetal o de cocina o que se hayan manchado de productos capilares, primero debe lavarlos con agua caliente y extra de detergente. Esto reduce el riesgo, pero no lo elimina.
- Se debe ventilar adecuadamente para evitar que entren gases de aparatos que quemen combustible o tengan llama abierta a la habitación.

# INSTRUCCIONES DE SEGURIDAD

---

- Si utiliza suavizantes o productos similares, debe hacerlo siguiendo las instrucciones del producto.
- Para las máquinas que puedan abrirse durante la extracción de agua, el proceso puede tardar 15 segundos o más en completarse.
- Saque todo lo que haya en los bolsillos, como mecheros y cerillas, antes de poner en marcha la lavadora.

## Disposición de eliminación




**ELIMINACIÓN: No elimine este producto como residuos municipales sin clasificar. Es necesario recoger estos residuos por separado para un tratamiento especial.**

Con base en la directiva europea 2012/19/UE de residuos de aparatos eléctricos y electrónicos (RAEE), los electrodomésticos no pueden ser arrojados en los contenedores municipales habituales; tienen que ser recogidos selectivamente para optimizar la recuperación y reciclado de los componentes y materiales que los constituyan y reducir el impacto en la salud humana y el medio ambiente.

El símbolo del cubo de basura tachado se marca sobre todos los productos para recordar al consumidor la obligación de separarlos para la recogida selectiva. El consumidor debe contactar con la autoridad local o con el vendedor para informarse en relación a la correcta eliminación de su electrodoméstico.

# INSTALACIÓN


## ■ Descripción del producto

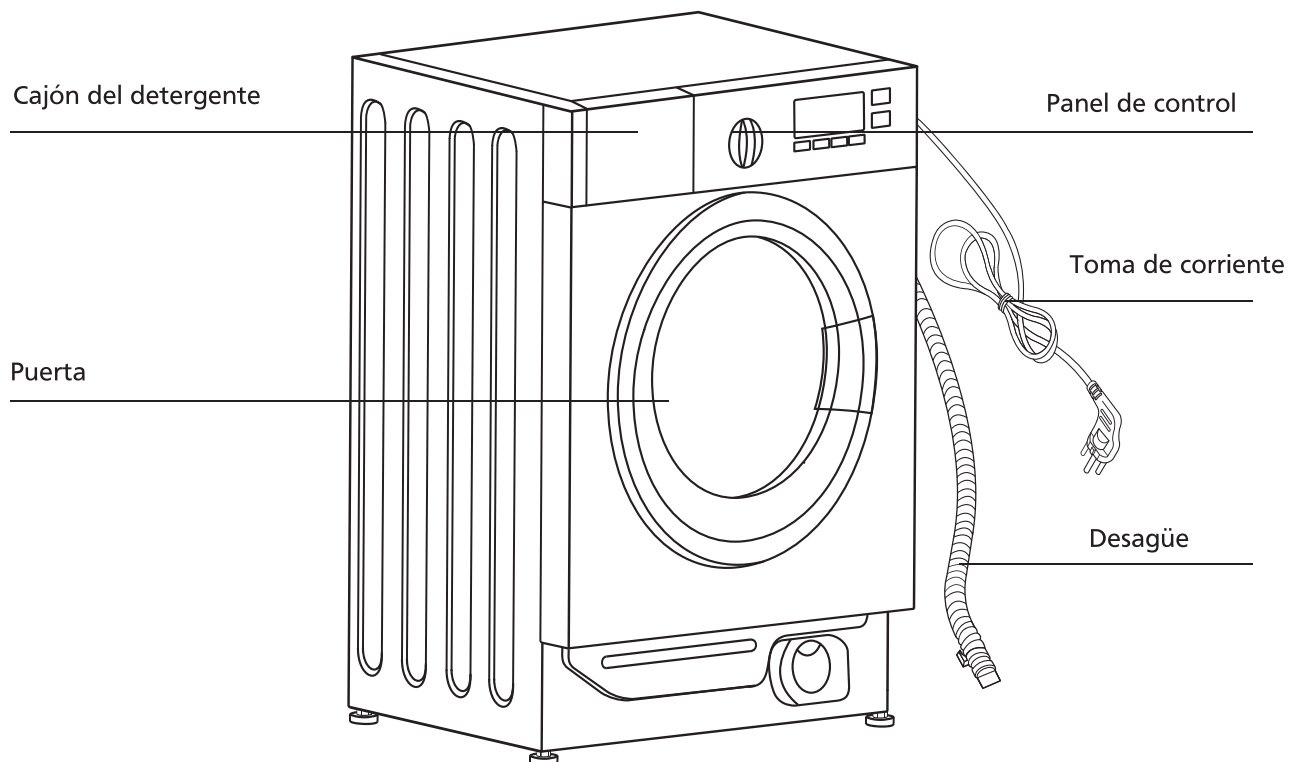

### 📌 Nota

- El diagrama del aparato tiene sólo fines informativos, prevalece el aspecto del producto real.

## Accesorios

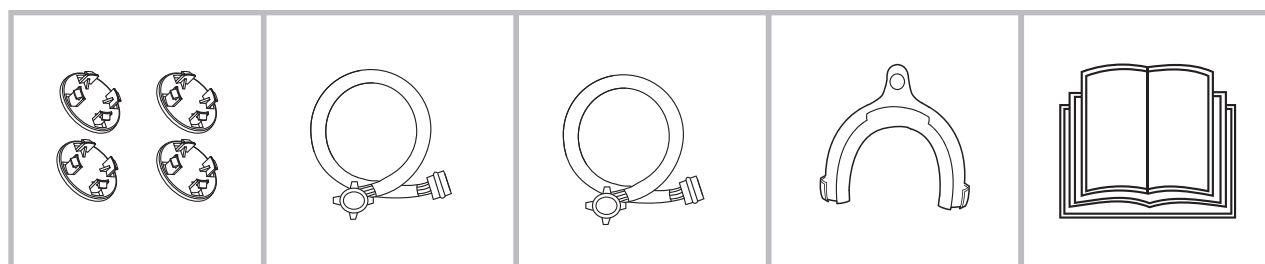

Tapas de transporte

Tubo suministro agua fría

Tubo suministro agua caliente (opcional)

Soporte tubería desagüe (opcional)


Manual de instrucciones

# INSTALACIÓN

## ■ Área de instalación


### ⚠ Advertencia

- La estabilidad es vital para evitar que el producto se mueva.
- Compruebe que el producto no pisa el cable de alimentación.

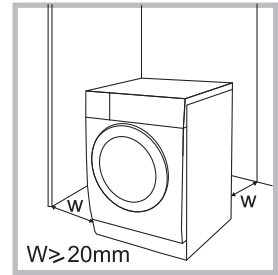

Antes de la instalación, se debe elegir una ubicación con las siguientes características:

1. Superficie sólida, seca y equilibrada
2. Sin impacto directo de la luz solar
3. Con suficiente ventilación
4. Temperatura ambiente superior a 0°C
5. Alejada de fuentes de calor como carbón o gas.

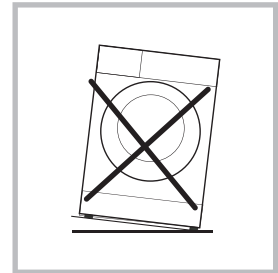


## Desembalaje de la lavadora

### ⚠ Advertencia

- El material de embalaje (plásticos, poliestireno) puede ser peligroso para los niños.
- Existe riesgo de asfixia. Mantenga todo el embalaje alejado de los niños.

1. Retire la caja de cartón y el corcho.
2. Levante la lavadora y retire el corcho inferior. Compruebe que el pequeño triángulo de corcho se ha retirado junto con el corcho inferior (véase imagen); si no, tumba la unidad de lado y retírelo a mano.
3. Retire la cinta del cable de alimentación y del tubo de desagüe.
4. Retire la tubería de entrada de agua del tambor.

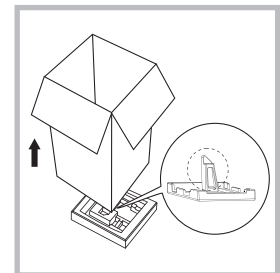


## Retire los tornillos de transporte

### ⚠ Advertencia

- Debe retirar los tornillos de transporte de la parte trasera antes de usar el producto.
- Guárdelos por si necesita mover de nuevo el aparato en un futuro.

Siga estos pasos para retirar los tornillos:

1. Afloje los 4 tornillos con una llave y retírelos.
2. Tape los agujeros con las tapas de transporte.
3. Guarde los tornillos para uso futuro.

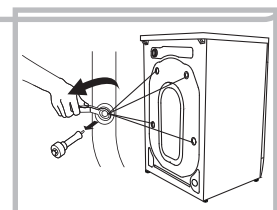


# INSTALACIÓN

## Equilibrar la lavadora

### ⚠ Advertencia

- Debe apretar con firmeza las cuatro tuercas de las patas.

1. Compruebe que las patas están fijadas al cuerpo de la lavadora. Si no, gire las tuercas para devolverlas a su posición original.
2. Afloje la tuerca de bloqueo y gire la pata hasta que toque el suelo.
3. Ajuste las patas y fíjelas con una llave, asegurándose de que la máquina está equilibrada.

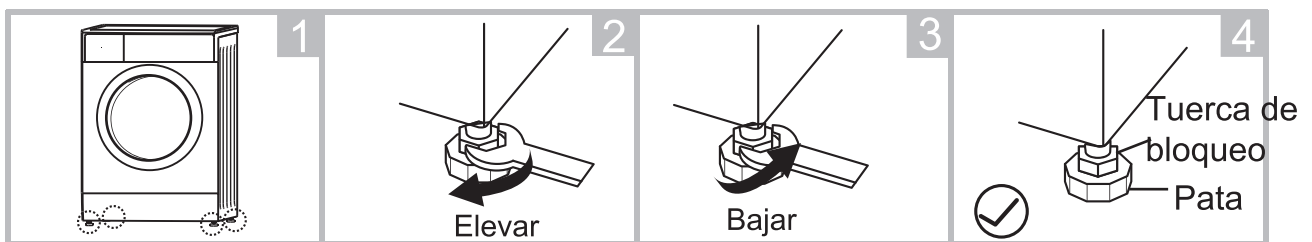


## Conecte la tubería de entrada de agua

### ⚠ Advertencia

- Para evitar fugas o daños por agua, siga las siguientes instrucciones.
- No tuerza, aplaste, modifique o corte la tubería de entrada de agua.
- Para modelos de doble válvula, conecte el grifo con la tubería de agua caliente. El consumo desciende automáticamente para algunos programas.

Hay dos formas de conectar la tubería de entrada.

1. Conexión entre grifo ordinario y tubería de entrada.

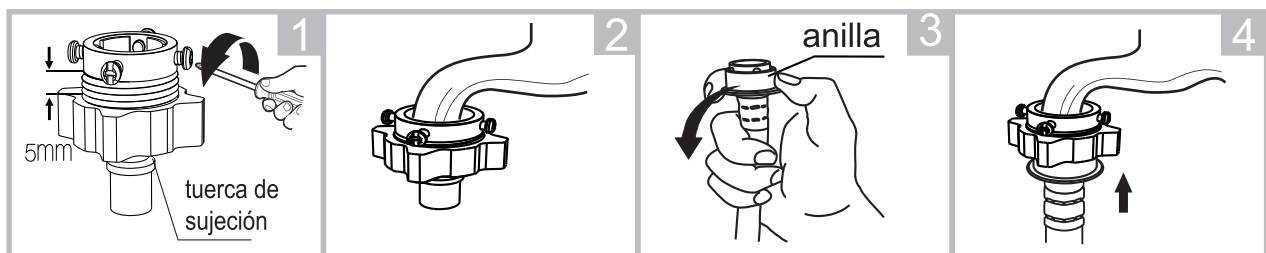


Afloje la tuerca de sujeción y los cuatro tornillos.

Apriete la tuerca de sujeción

Presione la anilla e inserte la tubería en la base.

Conexión finalizada

2. Conexión entre grifo de rosca y tubería de entrada.

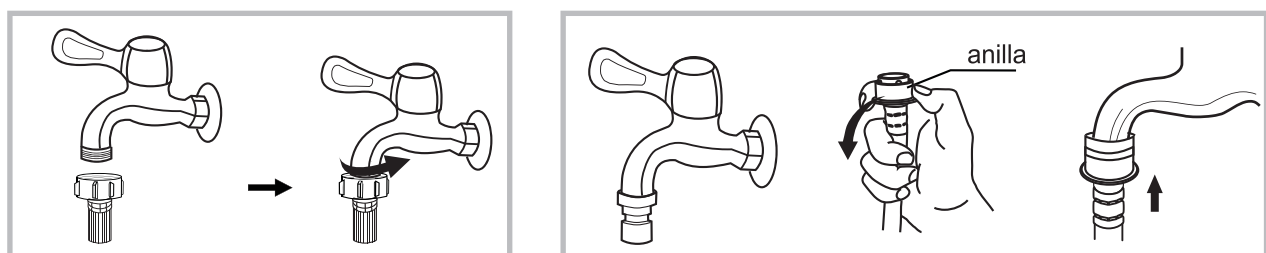


Grifo con rosca y tubería de entrada

Grifo especial para lavadora

# INSTALACIÓN

Conecte el otro extremo de la tubería de entrada a la válvula de entrada en la parte trasera del producto y apriete la tubería en el sentido de las agujas del reloj.

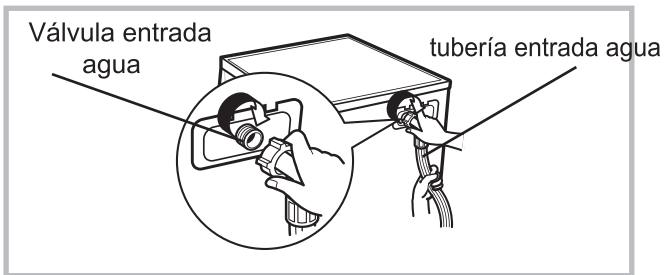


## Tubería de desagüe

### ⚠ Advertencia


- No doble ni prolongue la tubería de desagüe.
- Colóquela correctamente o puede haber fugas de agua.

Hay dos formas de colocar el extremo de la tubería de desagüe:

1. Al desagüe principal.


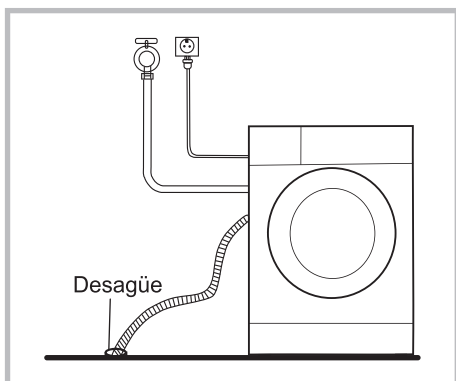


2. Conectarlo a un ramal del desagüe principal.

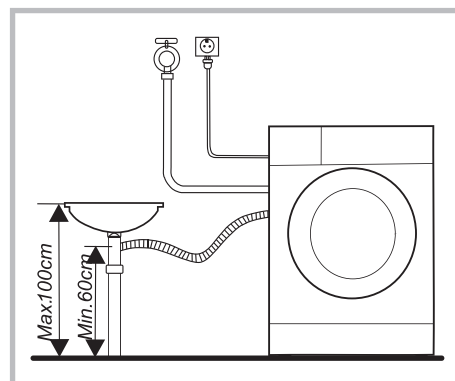

### 📌 Nota

- Si la máquina lleva soporte para el desagüe, instálelo así:

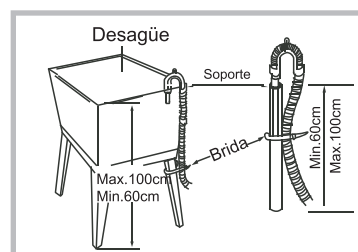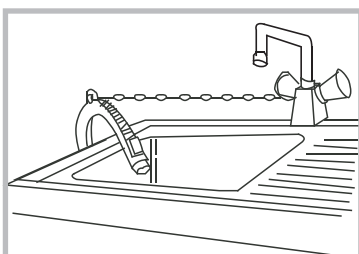

### ⚠ Advertencia

- Fije con una brida el desagüe al instalarlo.
- Si el desagüe es demasiado largo, no lo fuerce hacia dentro de la lavadora ya que puede causar ruido.

# FUNCIONAMIENTO

## ■ Inicio rápido

### ⚠ Atención

- Antes de lavar, compruebe que la instalación es correcta.
- Antes del primer lavado, se debe poner en marcha la máquina en todos los programas sin ropa.

### 📌 Calibración

Se recomienda calibrar la lavadora para un mejor rendimiento.


1- Vacíe la lavadora;

2- Enchúfela;

3- Encienda la lavadora y pulse "Inicio diferido" y "Centrifug." a la vez durante 10 segundos hasta que muestre "t19".

4- Pulse ▷|| para poner en marcha la lavadora hasta que se muestre "\*\*\*\*".


## 1. Antes del lavado

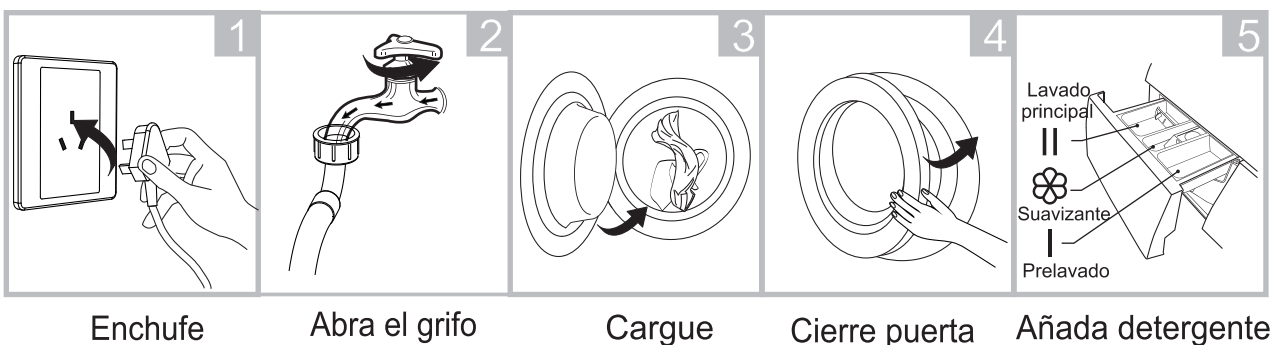

### 📌 Nota

- Debe añadir el detergente en el cajetín I tras seleccionar el prelavado para modelos con esta función.

## 2. Lavado

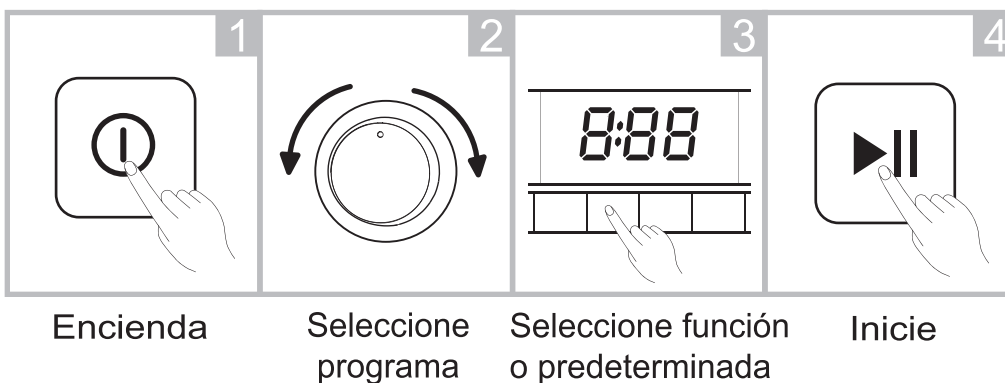



# FUNCIONAMIENTO

## Nota


1. Si elige el modo por defecto puede saltarse el paso 3.
2. El diagrama de funciones tiene sólo fin informativo, prevalece el aspecto del producto real.

## 3. Después del lavado


El indicador pita o se muestra “End” en la pantalla.

### ■ Antes de cada lavado


- El rango de temperatura para funcionamiento de la lavadora debe ser de (0-40)°C. Si se usa por debajo de 0°C podría dañarse la válvula de entrada y el sistema de desagüe. Si la máquina está expuesta a temperaturas de 0°C o menos, debe trasladarla a una temperatura ambiente normal para asegurar que no se congelen la entrada de agua ni el desagüe antes del uso.
- Compruebe las etiquetas y las instrucciones del detergente antes del uso. Utilice detergente sin espuma adecuado para el lavado a máquina.

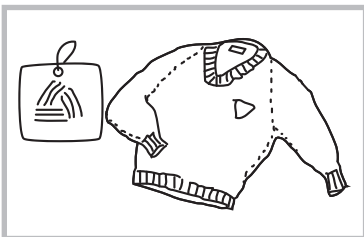


Compruebe la etiqueta

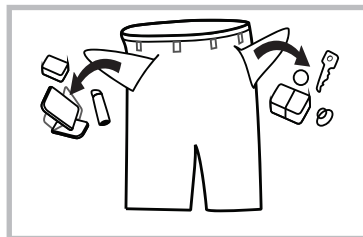


Saque todo lo que haya en los bolsillos

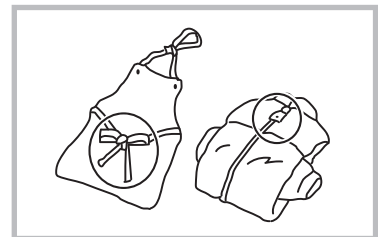


Anude las cintas, cierre cremalleras y botones

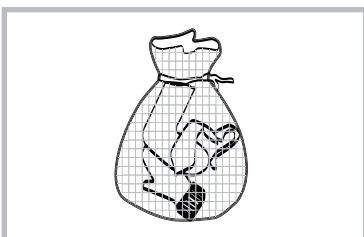

Ponga las prendas pequeñas en una funda

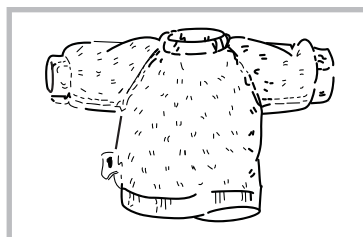

Ponga del revés los tejidos de fibras largas que puedan hacer bolas

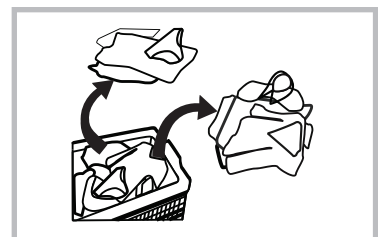

Separe las prendas de diferentes texturas


## ⚠ Advertencia

- Lavar una sola prenda puede desequilibrar la lavadora y hacer saltar alguna alerta. Es recomendable añadir una o dos prendas más para equilibrar el lavado.
- No lave productos que hayan estado en contacto con queroseno, gasolina, alcohol y otras sustancias inflamables.

# FUNCIONAMIENTO

## ■ Dispensador detergente

- I Detergente pre-lavado
- II Detergente lavado principal
- ☼ Suavizante

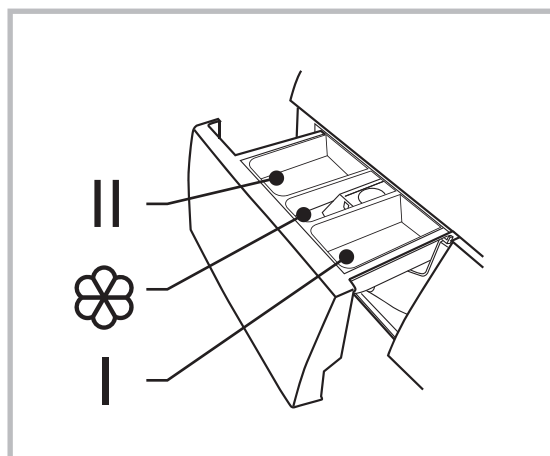

Saque el dispensador

### ⚠ Atención

- Sólo debe añadir detergente en el cajetín I tras elegir el pre-lavado en modelos con esta función.

Programa	I	II /	☼	Programa	I	II /	☼
Express 15'		●	○	Ropa bebé	○	●	○
Rápido 45'	○	●	○	Lana		●	○
20°C		●	○	Delicado		●	○
Vaqueros	○	●	○	Mixto	○	●	○
ECO 40-60		●	○	Sintético	○	●	○
Intensivo		●	○	Sports	○	●	○
Aclarado y centrifugado			○	Algodón	○	●	○
Solo centrifugado							


● Obligatorio      ○ Opcional

### 📌 Nota

- Es recomendable diluir los detergentes o suavizantes más espesos con agua para evitar que la entrada de detergente se bloquee y se desborde al llenarse de agua.
- Escoja un tipo de detergente apropiado para las distintas temperaturas de lavado y obtenga el mejor rendimiento con menos consumo de agua y de energía.

# FUNCIONAMIENTO

## ■ Panel de control

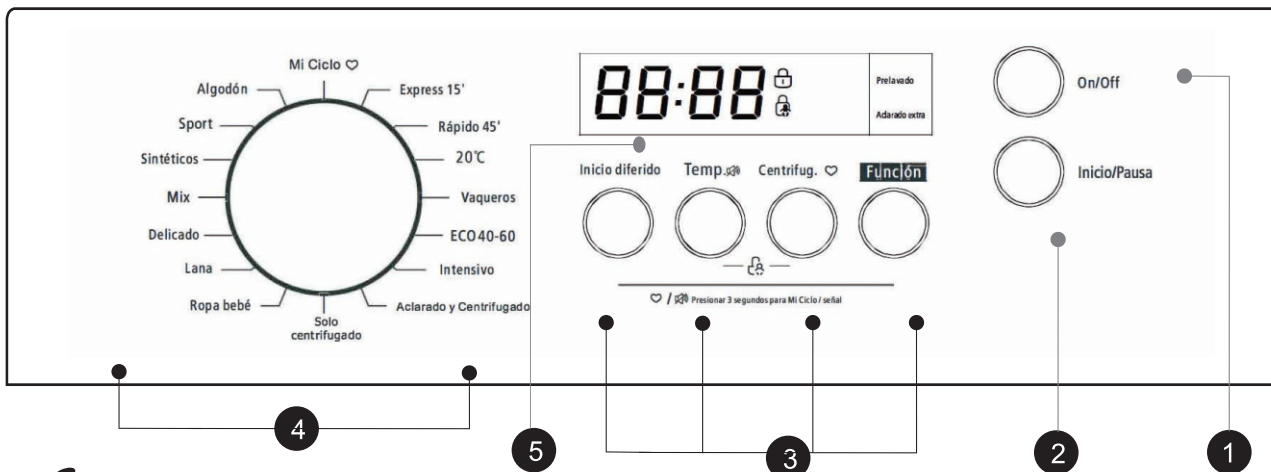

### 📌 Nota

Esta tabla sólo tiene fines ilustrativos, prevalece el objeto real.

#### 1 On/Off

Para encender y apagar el producto.

#### 2 Inicio/Pausa

Pulse el botón para iniciar o pausar el ciclo de lavado.

#### 3 Opciones


Permite elegir una función adicional y la seleccionada se ilumina.

#### 4 Programas

Disponibles según modelo.

#### 5 Pantalla

La pantalla muestra los ajustes, el tiempo restante aproximado, las opciones y los mensajes de estado. Se mantiene encendida durante el ciclo.

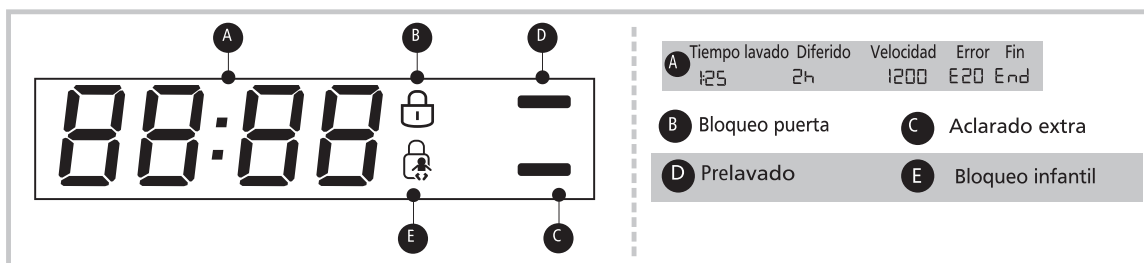

# FUNCIONAMIENTO

## ■ Opciones

Inicio diferido

### Inicio diferido

Ajuste la función Inicio diferido:

1. Seleccione un programa; 2. Pulse el botón para elegir el tiempo (el rango es de 0-24 H.); 3. Pulse [Inicio/Pausa] para comenzar la función de inicio diferido.



Elija el programa

Ajuste tiempo

Inicio

Cancele la función de inicio diferido:

Pulse [Inicio diferido] hasta que se muestre 0H en la pantalla, antes de que empiece el programa. Si ya ha empezado, debe apagarlo para ajustar uno nuevo.

## ⚠ Atención

- Si hay un corte de corriente durante el funcionamiento, el aparato memoriza el programa seleccionado para, al recuperar corriente, continuar el funcionamiento.

Pre-lavado

### Pre-lavado

La función de pre-lavado aplica un lavado extra antes del principal. Sirve para sacar el polvo de la ropa y lavarlo. Debe poner detergente en el cajetín I al seleccionarlo.

Extra aclarado

### Extra-aclarado

La colada recibe un aclarado adicional al seleccionar esta función.

Programa	Opción			Programa	Opción		
	Inicio diferido	Prelavado	Aclarado extra		Inicio diferido	Prelavado	Aclarado extra
Express 15'	<input type="radio"/>			Ropa bebé	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Rápido 45'	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Lana	<input type="radio"/>		<input type="radio"/>
20°C	<input type="radio"/>		<input type="radio"/>	Delicado	<input type="radio"/>		<input type="radio"/>
Vaqueros	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	Mixto	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Eco 40-60	<input type="radio"/>			Sintético	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Intensivo	<input type="radio"/>			Sport	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Aclarado y centrifugado	<input type="radio"/>		<input type="radio"/>	Algodón	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Solo centrifugado	<input type="radio"/>						

Opcional


# FUNCIONAMIENTO

## ■ Otras funciones



### Mi Ciclo

Memoriza los programas usados más frecuentemente.

Pulse [  ] durante 3 segundos para memorizar el programa en funcionamiento. El programa por defecto es el de Algodón.



### Bloqueo infantil

Para evitar una manipulación incorrecta por parte de niños.



On/Off



Inicio/Pausa



Pulse [Temp.] y [Centrifug.] 3 segundos hasta escuchar un pitido.

### ! Atención

- Pulse los dos botones 3 segundos para desactivar la función.
- El bloqueo infantil bloquea todos los botones excepto [On/Off].
- Si desactiva la corriente se desactiva también el bloqueo infantil.
- En algunos modelos el bloqueo infantil se mantiene efectivo al recuperar corriente.

Centrifug.

### Centrifug.

Pulse el botón para cambiar la velocidad de centrifugado.

Programa	Velocidad predet. (rpm)		Programa	Velocidad predet. (rpm)	
	1200	1400		1200	1400
Express 15'	800	800	Ropa bebé	800	800
Rápido 45'	800	800	Lana	600	600
20°C	1000	1000	Delicado	600	600
Vaqueros	1000	1000	Mixto	800	800
Eco 40-60	1200	1400	Sintéticos	800	1200
Intensivo	800	800	Sport	800	800
Aclarado y centrifugado	1000	1000	Algodón	800	1400
Solo centrifugado	1000	1000			

### ! Atención

- Cuando el indicador de Centrifugado está apagado, significa que la velocidad de centrifugado es 0

# FUNCIONAMIENTO

---

---

Temp.

Temp.

Pulse el botón para regular la temperatura (Frío, 20°C, 30°C, 40°C, 60°C, 90°C)

---



Silenciar las señales sonoras



On/Off

Inicio/Pausa

Pulse el botón [Temp.] durante 3 segundos para silenciar la señal sonora.

Para activar el timbre de nuevo, pulse el botón otra vez durante 3 segundos. Se mantendrán los ajustes hasta que vuelva a cambiarlos.



## Atención

- Tras silenciar el indicador, la lavadora no emitirá señales sonoras.

# FUNCIONAMIENTO

## ■ Programas

Programas disponibles según el tipo de tejido.

Programas	
Algodón	Tejidos resistentes, con tolerancia al calor, hechos de algodón o tela.
Rápido 45'	Para lavar rápidamente pocas prendas que no estén muy sucias.
Sintéticos	Para lavar prendas sintéticas, como camisas, abrigos y tejidos de mezcla. Al lavar prendas de punto, se debe reducir el detergente ya que por su estructura de punto largo puede formar burbujas.
Ropa bebé	Para lavar a fondo las prendas de bebé, con aclarado mejorado para proteger la piel del bebé.
Vaqueros	Especial para tejido vaquero.
Mixto	Carga mixta de prendas hechas de algodón y tejidos sintéticos.
20°C	Para prendas de color, protege mejor los colores vivos.
Sport	Para lavar prendas deportivas.
Express 15'	Programa extra corto, para ropa ligeramente sucia y cantidades pequeñas de ropa.
Delicado	Para tejidos delicados que se puedan lavar a máquina: seda, satén, fibras sintéticas o telas de mezcla.
Lana	Para tejidos de tela lavables a mano o a máquina. Programa de lavado especialmente suave para evitar que las prendas se encojan, con pausas más largas (las prendas reposan en líquido de lavado)
Sólo centrifugado	Centrifugado extra con posibilidad de seleccionar la velocidad.
Aclarado y centrifugado	Aclarado extra con centrifugado
Eco 40-60	Para lavar colores vivos con mayor protección. La temperatura por defecto son 40°C, no seleccionable, adecuada para lavar entre 40-60°C.
Intensivo	Se incrementa el tiempo de lavado para aumentar los efectos de limpieza.



### Nota

- Refiérase al producto para seleccionar los programas.

# FUNCIONAMIENTO

## ■ Tabla de programas de lavado

Programa	Carga (kg)	Temp.(°C)	Tiempo por defecto
	8.0	Predeterminado	8.0
			1400
Express 15'	2.0	Fría	0:15
Rápido 45'	2.0	40	0:45
20°C	4.0	20	1:01
Vaqueros	8.0	60	1:45
Eco 40-60	8.0	—	3:35
Intensivo	8.0	40	3:48
Aclarado y centrifugado	8.0	—	0:20
Solo centrifugado	8.0	—	0:12
Ropa bebé	8.0	60	1:43
Lana	2.0	40	1:07
Delicado	2.5	30	0:50
Mixto	8.0	40	1:20
Sintético	4.0	40	3:18
Sport	4.0	40	1:11
Algodón	8.0	40	3:49

Según normativa EN 60456:2016 con (EU) No 1061/2010, la clase de eficiencia energética es: A+++

Programa empleado en prueba: Intensivo a 60/40°C; Velocidad: Más alta; Demás ajustes: predeterminados.

Media carga para lavadora de 8.0Kg: 4.0Kg.

Según normativa EN 60456:2016/prA2019 con (EU)2019/2014, (EU)2019/2023, la clase de eficiencia energética de la UE es: B Programa empleado en prueba: ECO 40-60. Demás ajustes: predeterminados.

Media carga para lavadora de 8.0Kg: 4.0Kg.

Cuarto de carga para lavadora 8.0Kg: 2.0Kg.

### Nota

Los parámetros de esta tabla son sólo para referencia del usuario. Los parámetros reales podrían variar ligeramente.



# MANTENIMIENTO

---


## ■ Limpieza y cuidado

### ⚠ Advertencia

Antes del mantenimiento, desenchufe el aparato y cierre la llave de paso.

## Limpieza de superficies

Un mantenimiento adecuado puede alargar la vida útil de su lavadora. Puede limpiar la superficie con detergentes diluidos neutros, no abrasivos, cuando sea necesario. Si hay algo de agua sobrante, use el paño húmedo para limpiarlo de inmediato. No utilice ningún objeto afilado.

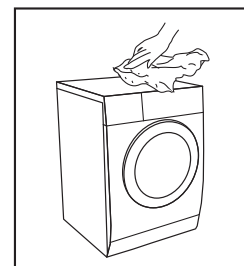

### 📌 Nota

No debe utilizar ácido fórmico ni sus disolventes diluidos o equivalentes, como alcohol, disolventes o productos químicos, etc.

## Limpieza del tambor


El óxido que quede en el tambor por artículos metálicos debe retirarse de inmediato con detergente sin cloro. Nunca utilice estropajos de aluminio.

### 📌 Nota

No coloque prendas en la lavadora mientras limpia el tambor.

## Limpieza de la goma y el cristal

Limpie el cristal y la goma después de cada lavado para retirar pelusa y manchas. Si se acumula pelusa puede dar lugar a fugas. Quite las monedas, botones y todo objeto que pueda quedar en la junta de goma tras cada lavado.

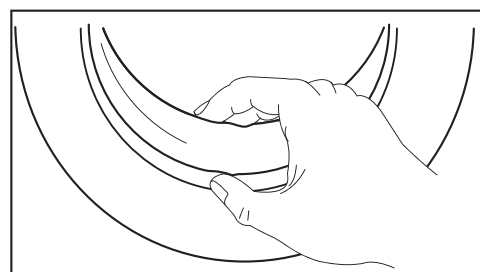

# MANTENIMIENTO



## Limpieza del filtro de entrada

### Nota

- Se debe limpiar el filtro de agua si hay menos entrada de agua.



Limpie el filtro del grifo:

1. Cierre la llave de paso.
2. Retire la tubería del grifo.
3. Limpie el filtro.
4. Reconecte la tubería de entrada de agua.

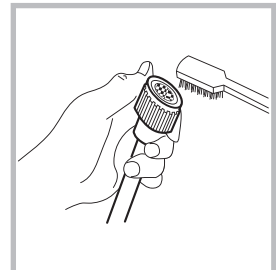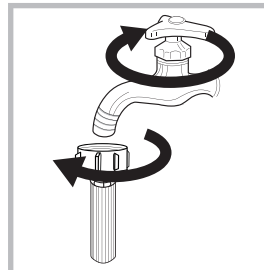

Limpie el filtro de la lavadora:

1. Desenrosque la tubería de la parte trasera del aparato.
2. Saque el filtro con pinzas y colóquelo de nuevo tras limpiarlo.
3. Use un cepillo para limpiarlo.
4. Vuelva a conectar la tubería.

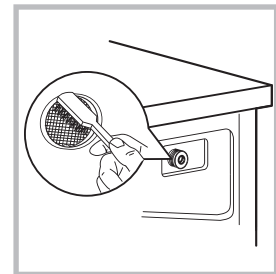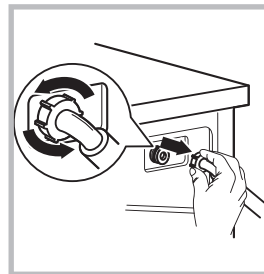


### Nota


Si no puede limpiarlo con el cepillo, puede extraer el filtro y lavarlo por separado; luego reconectar y abrir la llave de paso.

## Limpie el dispensador de detergente


1. Presione la flecha de la tapa del suavizante en el cajetín dispensador.
2. Levante la pestaña y saque la tapa del suavizante, y lave todas las ranuras con agua.
3. Ponga de nuevo la tapa y coloque el cajón en su posición original.

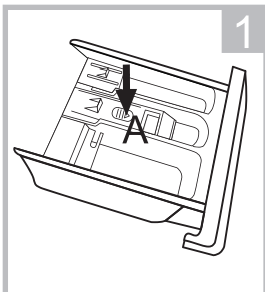


Saque el cajón pulsando en A

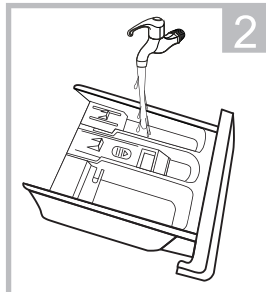

Limpie el cajón con agua

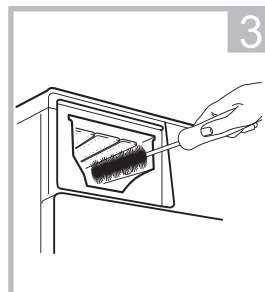

Limpie el hueco con un cepillo

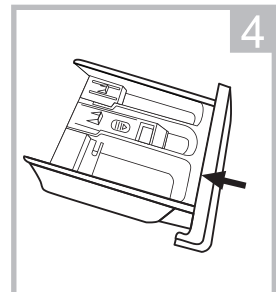

Coloque de nuevo el cajón

### Nota


No use alcohol, disolvente ni productos químicos para limpiar la lavadora.

# MANTENIMIENTO


## Limpieza del filtro de la bomba de desagüe

### ⚠ Advertencia


- ¡Lleve cuidado con el agua caliente!
- Deje que la solución de detergente se enfríe.
- Desenchufe la máquina para evitar electrocuciones y descargas.
- El filtro de la bomba de desagüe filtra fibras y pequeños objetos que puedan quedar tras el lavado.
- Limpie el filtro periódicamente para asegurar un funcionamiento correcto de la lavadora.

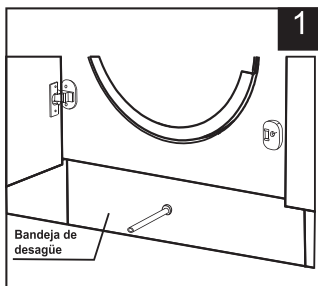

Tras quitar la corriente, extraiga la bandeja de desagüe.

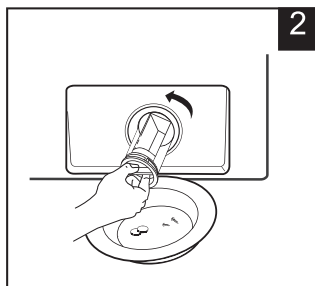

Gire el filtro como se muestra en la imagen y extraiga todo objeto extraño.

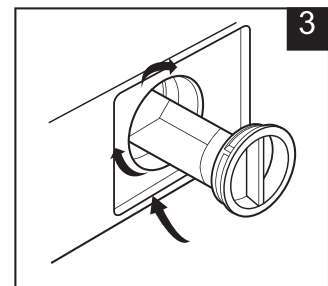

Vuelva a colocar cada parte después de que retire los residuos.

### ⚠ Atención

- Compruebe que la tapa de la válvula y el desagüe de emergencia se recolocan adecuadamente. Las pestañas de la tapa deben alinearse con el agujero para que no haya fugas de agua.
- Algunos modelos no tienen desagüe de emergencia, por lo que los pasos 2 y 3 pueden saltarse. Rote la tapa interior para que el agua caiga a la bandeja.
- Con el aparato en uso y según el programa, puede haber agua caliente en la bomba. Nunca retire la tapa durante un ciclo de lavado, espere siempre a que el ciclo termine y esté vacía. Al colocar de nuevo la tapa, confirme que se vuelve a cerrar correctamente.

# MANTENIMIENTO

## ■ Solución de problemas

Si al iniciar el aparato no funciona o se para durante el funcionamiento, intente encontrar una solución al problema a continuación. Si no es posible, llame al servicio técnico oficial.

Descripción	Causa	Solución
La lavadora no se pone en marcha	La puerta no está bien cerrada	Reinicie tras cerrar la puerta. Compruebe que no hay ropa atascada.
La puerta no se abre	Está activo un sistema de protección del aparato.	Desconecte la corriente para reiniciar la lavadora
Fuga de agua	La conexión de la tubería de entrada o salida está suelta	Compruebe y apriete las tuberías. Limpie el desagüe
Residuo de detergente en la caja	El detergente está húmedo o es demasiado espeso	Limpie y seque la caja de detergente
El indicador o la pantalla no se encienden	Desconecte la placa, o hay un problema de conexión de los cables	Compruebe si no hay corriente o si está correctamente enchufado
Ruido anormal		Compruebe que se han retirado los tornillos y que está instalado en suelo sólido y nivelado

Descripción	Causa	Solución
<b>E30</b>	La puerta no está bien cerrada	Reinicie tras cerrar la puerta. Compruebe que no hay ropa atascada.
<b>E10</b>	Problema de entrada de agua durante el lavado	Compruebe si la presión de agua es demasiado baja. Enderece la tubería. Compruebe si el filtro de la válvula de entrada está bloqueado
<b>E21</b>	Duración excesiva desagüe	Compruebe atasco desagüe
<b>E12</b>	Desbordamiento de agua	Reinicie la lavadora
<b>EXX</b>	Otros	Inténtelo de nuevo o llame al servicio técnico oficial si persiste.




### Nota

Tras la comprobación, inicie el aparato. Si persiste el problema o el display muestra otros errores, llame al servicio técnico.

# MANTENIMIENTO

## ■ Especificaciones técnicas

Corriente máxima	10A
Presión de agua estándar	0.05MPa~1MPa

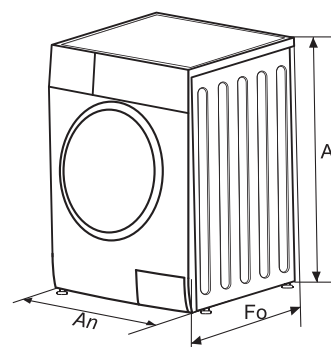

Modelo	Capacidad lavado	Dimensiones (An*Fo*Almm)	Peso neto	Corriente nominal
MFG10W80B/W-ES	8.0kg	595*540*825	63kg	1950W

# MANTENIMIENTO

Nombre de la marca: Midea Europe GmbH

Dirección:

Modelo: MFG10W80B/W-ES

Parámetros generales del producto:

Parámetro	Valor	Parámetro	Valor	
Capacidad nominal <sup>(a)</sup> (Kg)	8.0	Dimensiones (en cm)	Altura	83
			Anchura	60
			Profundidad	54
EEI <sub>W</sub> <sup>(a)</sup>	60.0	Clase de eficiencia energética <sup>(a)</sup>	B	
Índice de eficiencia de lavado	1,031	Eficiencia del lavado (g/kg) <sup>(a)</sup>	5.0	
Consumo de energía en kWh por ciclo, basado en el programa eco 40-60. El consumo real de energía depende de cómo se utilice el aparato.	0.545	Consumo de agua en litros por ciclo, basado en el programa eco 40-60. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	48	
Temperatura máxima en el interior del tejido tratado (°C)	Capacidad nominal	37	Weighted remaining moisture content <sup>(b)</sup> (%)	53.9
	Media	33		
	Cuarto	23		
Velocidad de centrifugado (rpm)	Capacidad nominal	1400	Clase de eficiencia de secado por centrifugado <sup>(a)</sup>	B
	Media	1400		
	Cuarto	1400		
Duración del programa (h:min)	Capacidad nominal	3: 38	Tipo:	Integrable
	Media	2: 48		
	Cuarto	2: 48		
Presión sonora aerotransportada en centrifugado (dB(A) re 1 pW)	76	Clase de presión sonora aerotransportada <sup>(a)</sup> (Fase de centrifugado)	B	
Modo apagado (W)	0.50	Modo de espera (W)	1.00	
Inicio diferido (W) (si aplica)	4.00	Espera en red (W) (si es aplicable)	N/A	

Duración mínima de la garantía ofrecida por el proveedor <sup>(b)</sup>: Dos años

Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado.

NO

Información adicional

Enlace a la web del proveedor, donde se encuentra la información del punto 9 del Anexo II del Reglamento de la Comisión (UE) 2019/2023 (1) (b): [www.easelectric.es](http://www.easelectric.es)

<sup>(a)</sup> Para el programa eco 40-60.


<sup>(b)</sup> Los cambios en estos elementos no se considerarán pertinentes a los efectos del párrafo 4 del artículo 4 del Reglamento (UE) 2017/1369.

<sup>(c)</sup> Si la base de datos de productos genera automáticamente el contenido definitivo de esta celda, el proveedor no introducirá estos datos.


# MANTENIMIENTO

## ■ Instalación integrable


### Accesorios

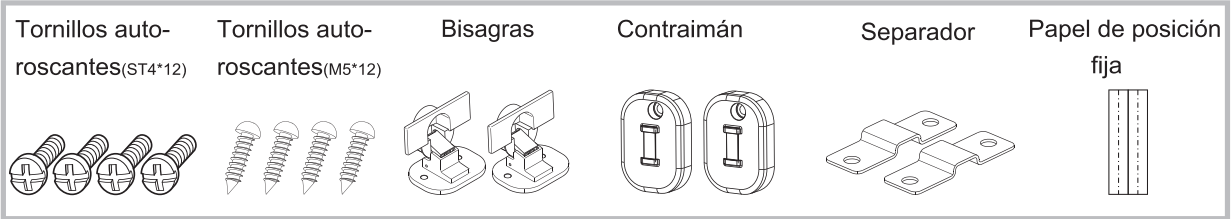


### Herramientas

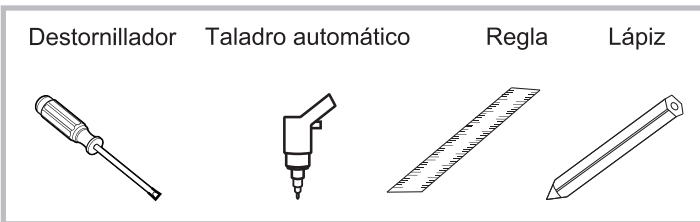

### Pasos de instalación

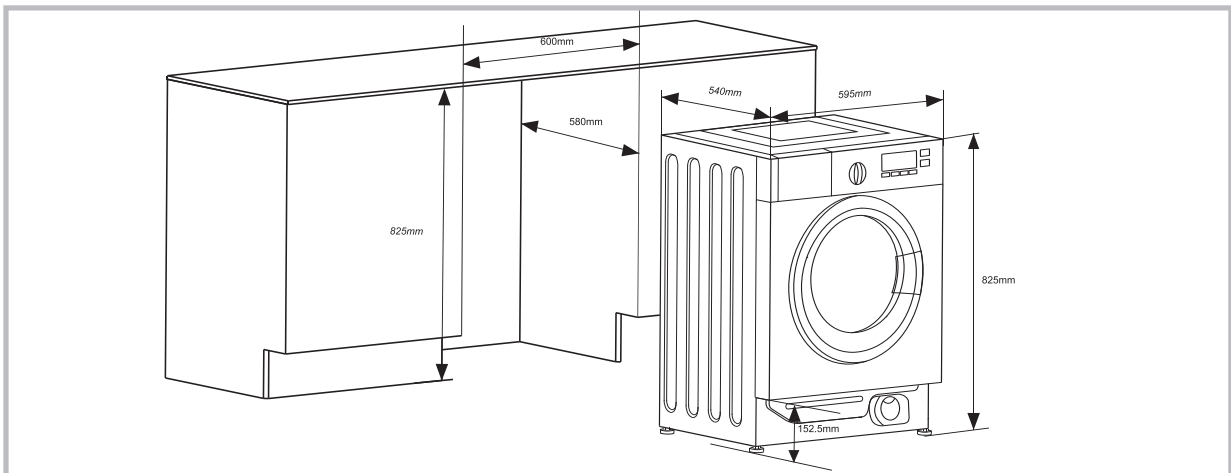


### Esquema

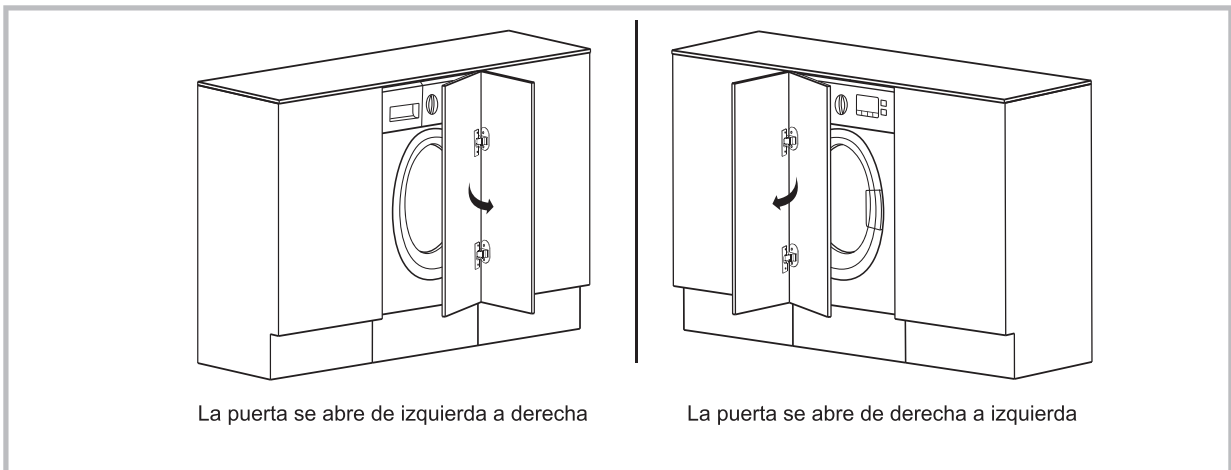


### Preparación y montaje de la puerta


# MANTENIMIENTO

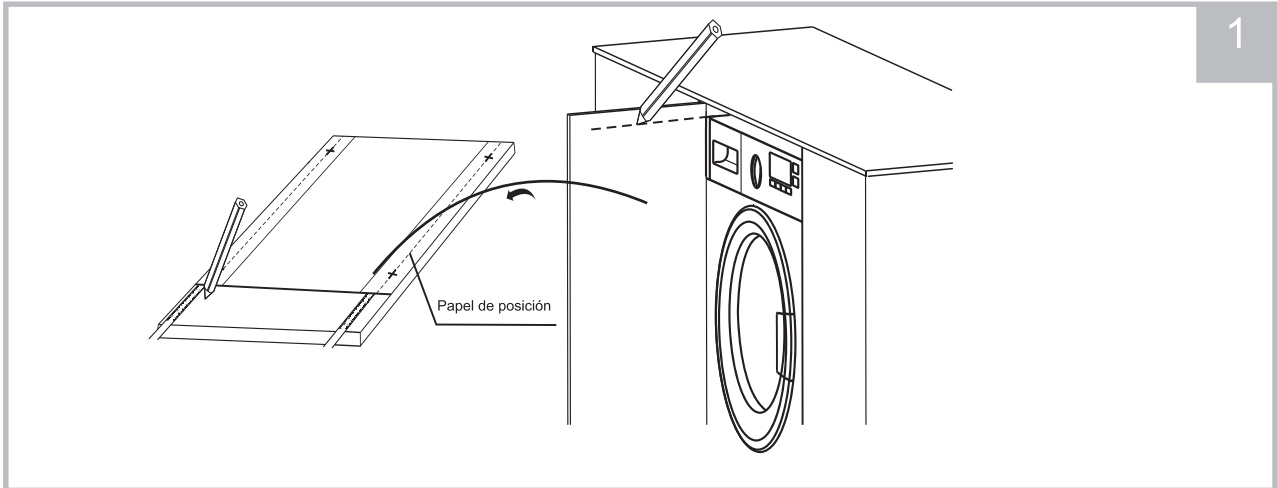

Haga la marca sobre la puerta

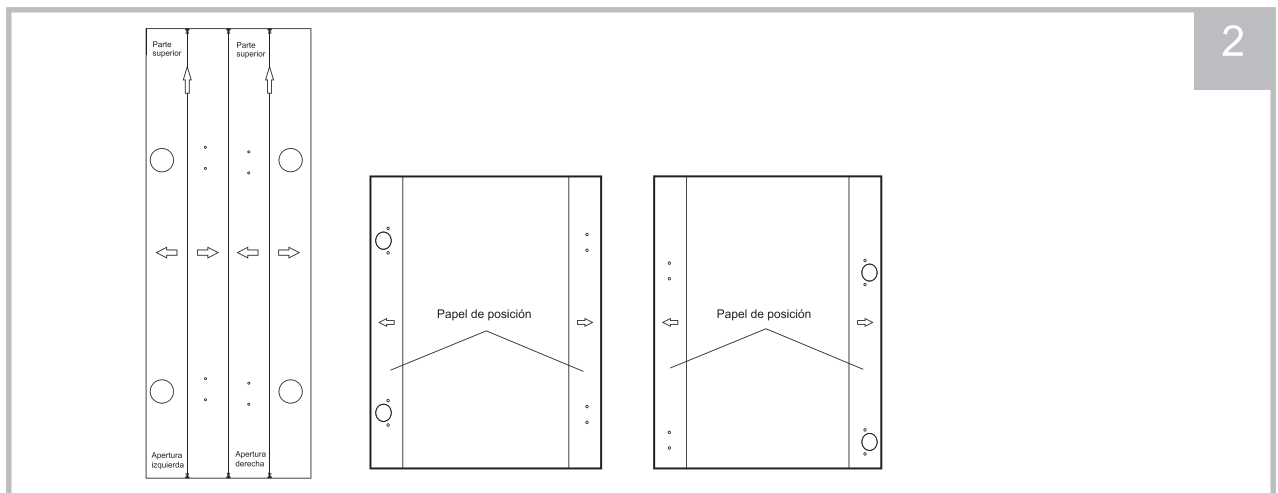


Fije el papel de posición en la puerta

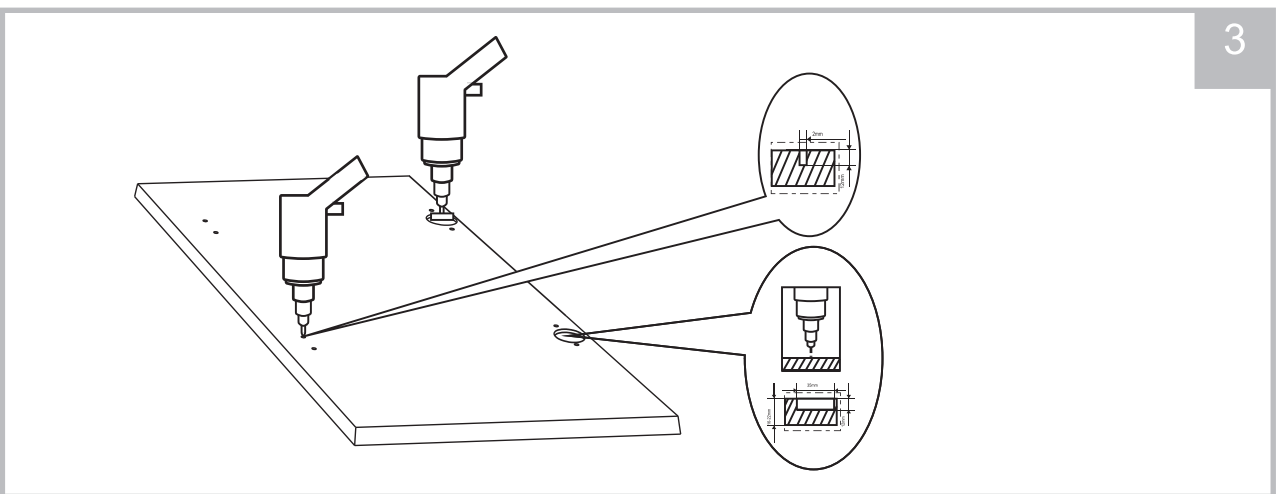

Taladre los agujeros en la puerta




# MANTENIMIENTO

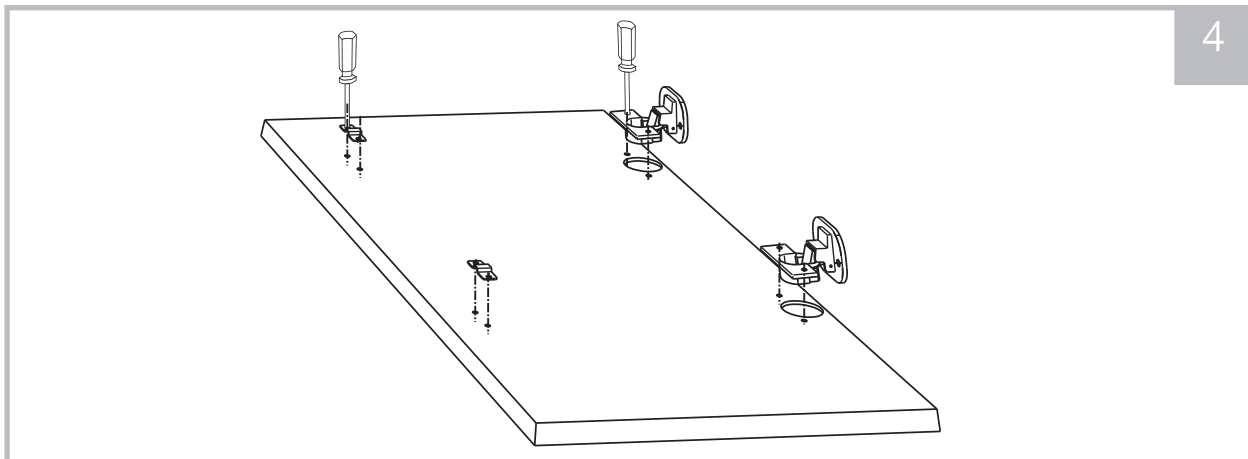


4

Instale las bisagras y el separador

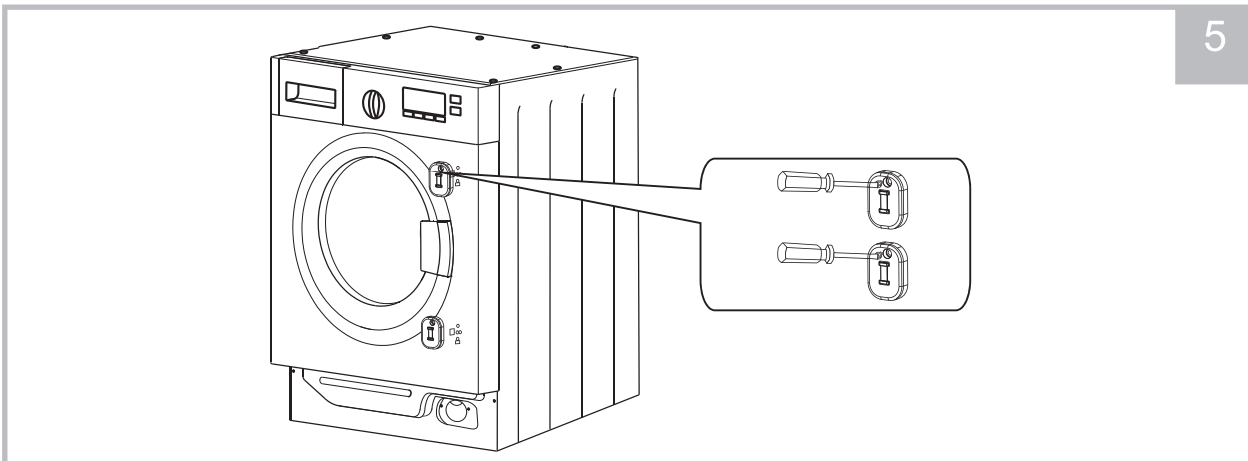

5

Instale los contraimanos

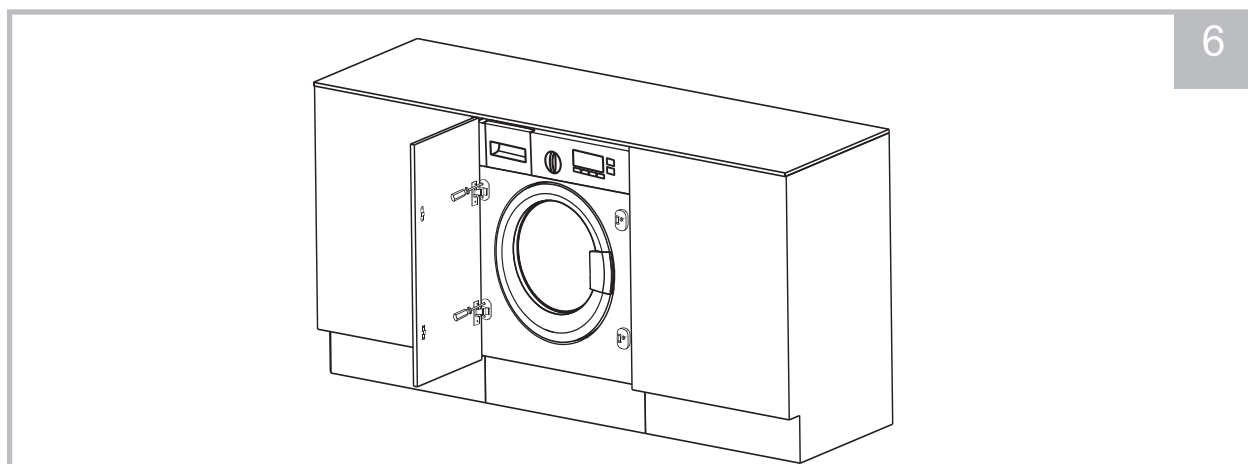

6

Instale la puerta

## ⚠ Advertencia

- Al instalar la lavadora en el mueble de la cocina, compruebe, si es posible, que las tuberías están colocadas en uno de los dos huecos de la parte trasera del aparato, para evitar que se tuerzan o se aplasten.